


## QUICK CONFIGURATION GUIDE

### Connection

Connect RS-232 cable of the S3-RS /S5i-RS scale to the printer.

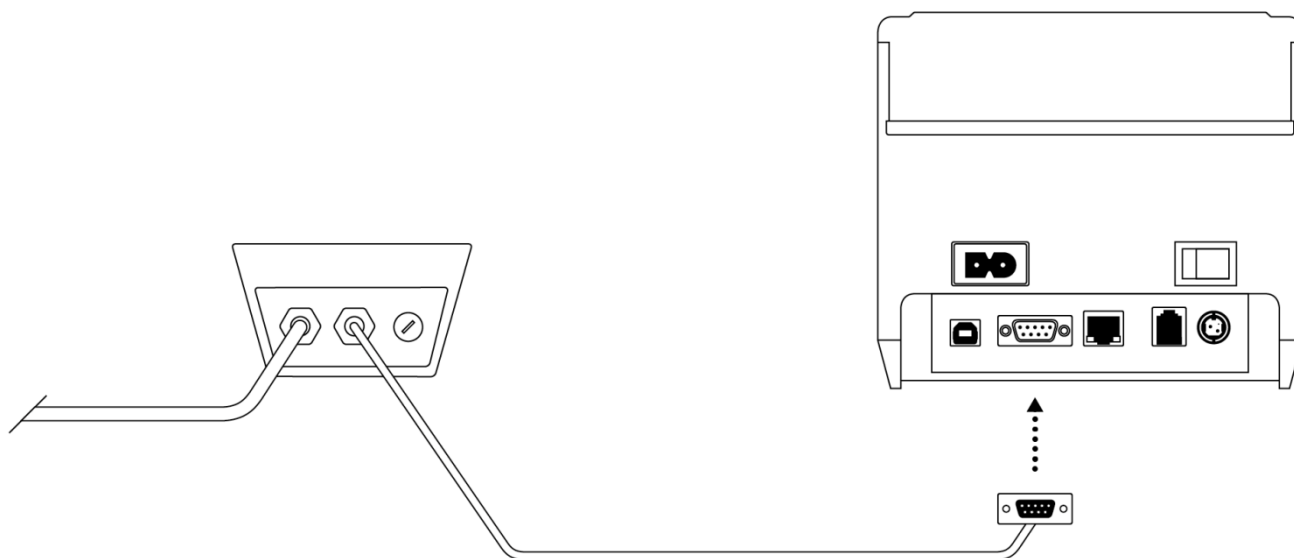

### Step 1: Configure the S3-RS / S5i-RS scale for use with the PR6 printer

The S3-RS / S5i-RS scale is factory-configured for using a model PR4 printer. To obtain full performance from your **PR6 printer**, you need to first change this configuration before its use, following the indications contained in this document. Once this procedure has been completed, the configuration is registered in the unit's non-volatile memory and it will not be necessary to repeat it.

1. Press key **[PLU/M]** to access the configuration options menu.
2. Press key **←** to move to the *PrntMod* menu option.
3. Press key **↵** to validate. The visor will display the *Prnt 1* option.
4. Press key **↑**. The visor displays the *Prnt 2* message to indicate that the printer connected to the K3 is a PR6.
5. Press key **↵** to validate.
6. Press key **[U/ESC]** to exit the configuration options menu and return to normal operating mode (weight indicator).  
The visor will display the *SAVE* message, indicating that the selected option has been saved to the scale's non-volatile memory.

