




## **QUICK CONFIGURATION GUIDE**

## Connection

Connect the "K printer cable" (Ref. 32294) to the weight indicator and to the printer.

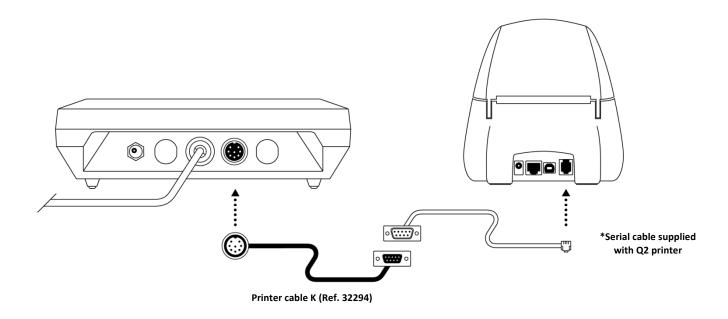

## Step 1: Configure the K3X/K3iX weight indicator for use with the Q2 printer

The K3X/K3iX indicator is factory-configured for using a PR4 model printer. To obtain full performance from your **Q2 printer**, you need to first change this configuration before its use, following the indications contained in this document. Once this procedure has been completed, the configuration is registered in the unit's non-volatile memory and it will not be necessary to repeat it.

- 1. Long press of the **[PLU/M]** key to access the configuration options menu.
- 2. The A-OF menu appears
- 3. Press the  $\leftarrow$  key to move to the  $\sim$  5232 menu option
- 4. Press the Enter key to validate, the display will show the option b வடி
- 5. Press the ← key to move to the ☐☐☐ 2 menu item
- 6. Press the Enter key to validate, the display will show the option  $5-\Pi \circ d$
- 7. Press the  $\leftarrow$  key to move to the  $\vdash \square \vdash \square \vdash \square$  menu item
- 8. Press the Enter key to validate, the display will show Pr4
- 9. Press the ← key to move to the menu item 92
- 10. Press the 

  key to validate, 584E will appear and you will return to the F□-□ 1
- 11. Press the **Esc** key **(U)** three times to exit the setup menus.
- 12. Setup is complete.

003/19072021



 $\label{lower} \textbf{Download the full manual from the following link:} \\ \textbf{http://gram-group.com/wp-content/uploads/2016/12/MANUAL\_K3\_2017\_ENG.pdf}$ 

