


RXT

ACCUREX

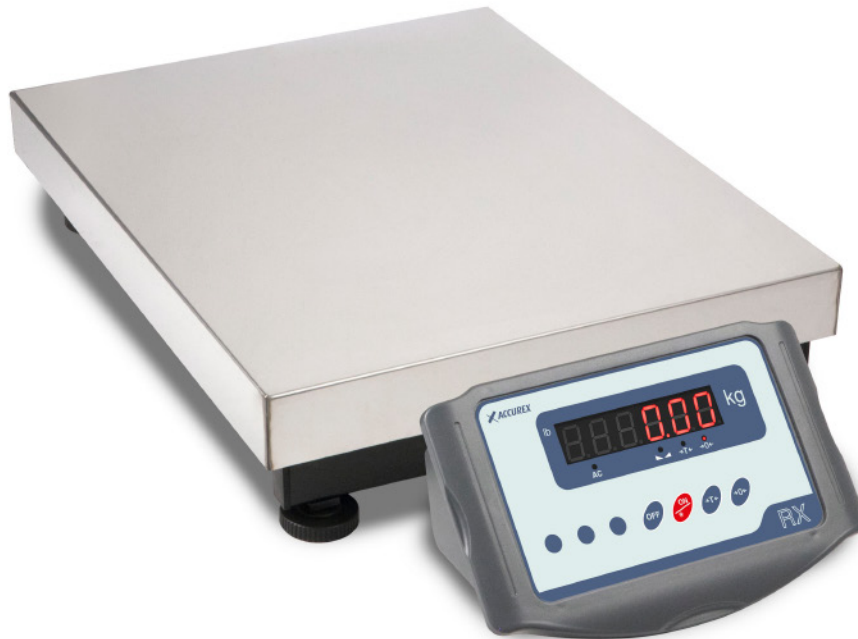

Industrial bench scale

For weighing portions, checking the weight of products, small packages and weighing mixtures and additives.

- Industrial scale with platform and separate indicator.
- Capacity from 15 to 150 kg with weighing plate of different dimensions, depending on the model.
- Operating autonomy with internal battery of up to 50 hours.
- Weighing indicator with 20 mm LED digits and great luminosity.
- Aluminium load sensor and durable electronics for intensive industrial use.
- Designed in Europe and manufactured by Gram Group.

The Accurex RXT scale models are products for professional use, they can withstand hard and intensive treatment. They are made of lacquered steel and stainless steel in their structure, with highly reliable RX electronic indicator.

The RX indicator can be placed at a distance from the platform or on its front. The response of the weighing is extremely fast, in less than 2 seconds it shows the stable weight accurately.



Operational functions

- Setting to zero.
- Taring of receptacles with tare memory.

It is powered by a 220V network and also by its internal battery, which is recharged by the same network cable. While the scale is being used, its battery is being recharged simultaneously.

Zero adjustment function. The unit can be zeroed at the press of a key.

Tare function. The weight of a container or box can be deducted by pressing the tare key.

Calibration as standard. The equipment is supplied duly calibrated and adjusted by our calibration laboratory located in Barcelona (audited annually by the European notified body NMI).



Technical features

Model	RXT-15S	RXT-30S	RXT-60S	RXT-150S	RXT-30M	RXT-60M	RXT-150M
Capacity (kg)	15	30	60	150	30	60	150
Resolution (g)	2	5	10	20	5	10	20
Weighing units	kg						
Material of the structure	lacquered steel						
Material of the plate	stainless steel						
Indicator material	ABS						
Plate dimensions (mm)	400 x 300				500 x 400		
Dimensiones del indicador (mm)	255 x 165 x 110				255 x 165 x 110		
Platform height (mm)	110				110		
Total height (mm)	140				140		
Indicator net weight (kg)	1.2				1.2		
Platform net weight (kg)	4.1				7.9		
Dim. with packaging (mm)	600 x 335 x 150				700 x 410 x 150		
Total weight with platform packaging (kg)	6,2				10		

External dimensions (mm)

