


# GRAM<sup>▼</sup> Xtrem Lion M



600 kg  
5,000 kg

DESIGNED  
IN EUROPE

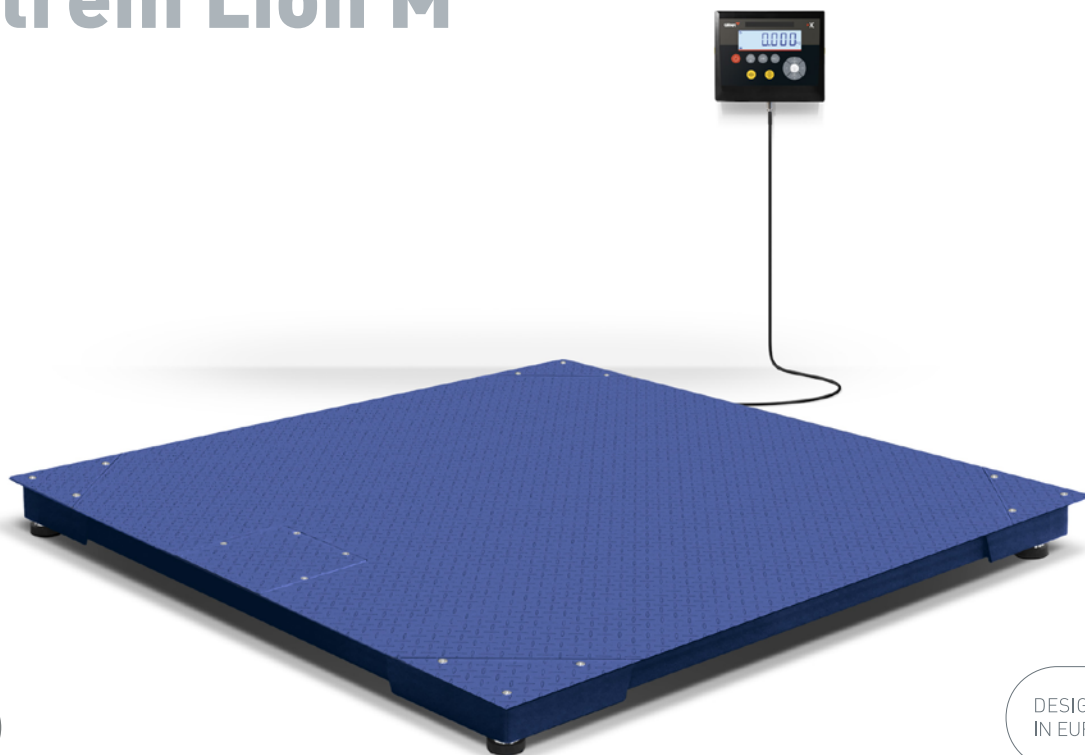

## Strong and easily maintained, with legal approval

- Digital scale with CE-M Verification for legal use and 2 x 3000-division ranges.
- Highly reliable with Z Link communication technology and Xtrem digital core.
- Fully autonomous, data sent to an indicator, PC, tablet or Android smartphone <sup>(1)</sup>.
- Maximum safety: important adjustment and calibration data incorporated in the platform are armoured.
- Web Server to send data to Chrome, Edge and Safari browsers.
- Total flexibility: Data sent by cable, Ethernet <sup>(2)</sup>, WiFi <sup>(2)</sup> or RS485 <sup>(2)</sup>.
- Upper openings for quick assembly and maintenance of the sensors.
- 2-layer epoxy coating, Class C3 sensors and IP67 protection.
- Prepared for high connectivity (Industry 4.0)

<sup>(1)</sup> With Wi-Fi option.

<sup>(2)</sup> Optional.

### View the data on a smartphone


Our Xtrem equipment with WiFi option sends the data directly from the platform to a smartphone using our Android app, directly and without an indicator, from the weighing platform to the smartphone. It's that easy.



Hold

→T←

Time	Item
09:07:46	7638900295641
12:10:26	7638900295641

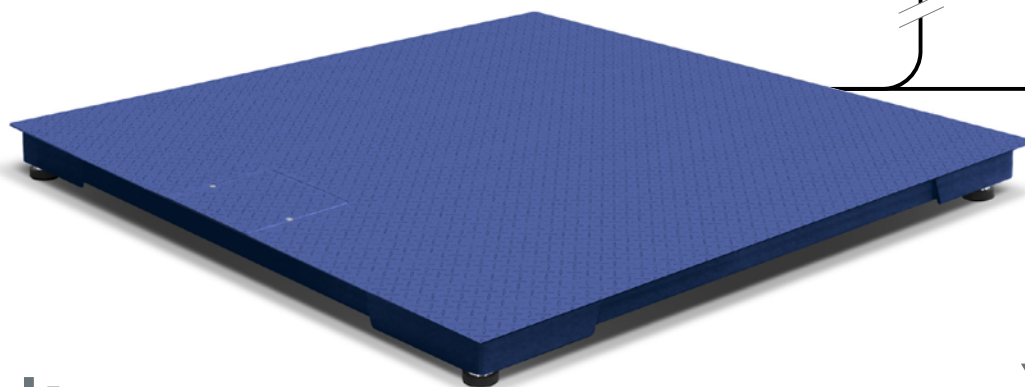


#### Z-Link connectivity

- Multiple connection options with indicators, PC software and Android smartphone.
- Fully digital platforms that include all data in its internal Xtrem module.
- Greater safety and reliability due to digital communication between platform, indicators and PC or Android software.
- Data sent directly to PC or smartphone by optional WiFi in the platform's own Xtrem module.
- Connection of multiple platforms via Wi-Fi or Ethernet router, for central management.
- Web Server for data capture from Chrome, Edge and Safari browsers.

#### Protected connection with steel tube

- The Z Link connection cable is protected along most of its length by a steel tube.
- Excellent adaptation to the platform output for greater robustness.
- Guarantees proper communication of your Xtrem equipment with peripherals. Digital data are not influenced by bad connections or other equipment.

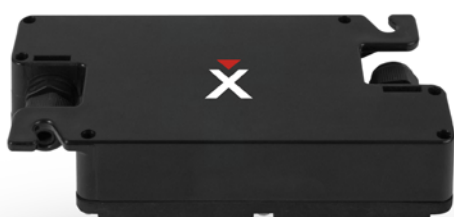

#### Digital core

- Xtrem digital module integrated inside the platform structure.
- The most advanced technology for maximum data security.



### Quick access

- Easy access to C3 type sensors makes equipment maintenance easier.





### Advanced connectivity

- Our Xtrem equipment connects directly <sup>(3)</sup> to the Ethernet, Wifi or RS485 without intermediate equipment.

(3) Optional.

### Easy maintenance

- Upper access to the adjustment junction box for easy maintenance of equipment.

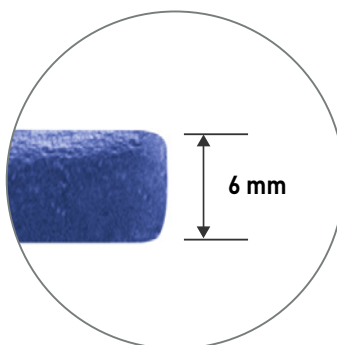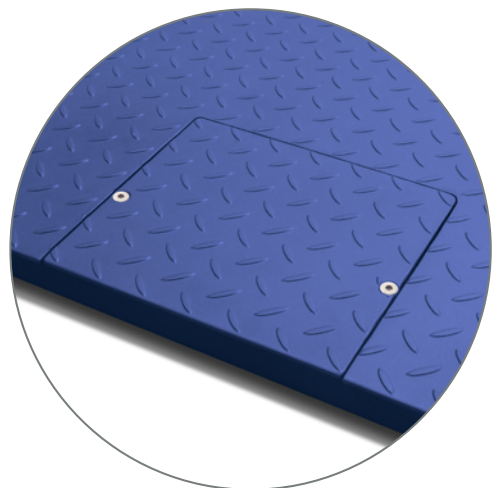

6 mm

### Increased strength <sup>(4)</sup>

- Sandwich-type construction with a 6 mm thick upper surface.
- Structure fully welded to the upper surface.
- 2-layer epoxy coating.

(4) Models larger than 2000 x 2000 mm.






**Extra-long Z Link cables**

- The standard Z Link digital connection cable can be replaced with longer ones of 8 and 15 m.
- Allows replacement in case of failure or breakage, due to its sealed connection and quick connectors.

**4 m Z Link cable as standard.****Optional 8m Z Link cable.****Optional 15m Z Link cable.**

Model	M	Xtrem Lion 1210 600	Xtrem Lion 1210 1.5T	Xtrem Lion 1210 3T	Xtrem Lion 1210 5T	Xtrem Lion 1212 600	Xtrem Lion 1212 1.5T	Xtrem Lion 1212 3T	Xtrem Lion 1212 5T	Xtrem Lion 1512 1.5T	Xtrem Lion 1512 3T	Xtrem Lion 1512 5T	Xtrem Lion 1515 1.5T	Xtrem Lion 1515 3T	Xtrem Lion 1515 5T	Xtrem Lion 2015 1.5T	Xtrem Lion 2015 3T	Xtrem Lion 2015 5T		
Reference		71794M	71437M	71439M	71789M	71795M	71667M	71790M	71791M	71440M	71422M	71792M	71608M	71626M	71678	71427M	71441M	71793M		
Capacity / max (kg)		300/600	600/1500	1500/3000	3000/5000	300/600	600/1500	1500/3000	3000/5000	600/1500	1500/3000	3000/5000	600/1500	1500/3000	3000/5000	600/1500	1500/3000	3000/5000		
Resolution / e (g)		100/200	200/500	500/1000	1000/2000	100/200	200/500	500/1000	1000/2000	200/500	500/1000	1000/2000	200/500	500/1000	1000/2000	200/500	500/1000	1000/2000		
Weighing units		g, kg																		
Class		OIML (III)																		
Maximum error (g)		± 0,1%																		
Tare range (g)		- Max <sub>2</sub>																		
Connectivity		RS232C, Ethernet <sup>(1)</sup> , WiFi <sup>(1)</sup> , RS485 <sup>(1)</sup>																		
Transmission speed		9600, 19200, 38400, 57600, 115200 bauds																		
Power		Adapter 230 V/50 Hz (Euro) 7.5 Vdc or via indicator																		
Working temperature		-10°C / +40°C																		
Upper surface thickness		6 mm																		
Structure		Steel with baked epoxy paint																		
Load sensors		4 x H8C Rebel IP67																		
Connections box		Hermetic with IP68 protection, in AISI 304 stainless steel																		
Dim. platform (mm)		1200 x 1000				1200 x 1200				1500 x 1200				1500 x 1500				2000 x 1500		
Minimum height		106																		
Maximum height		131																		
Platform net weight (kg)		115				130				153				186				246		
Packaging dim. (mm)		1210 x 1010 x 150				1210 x 1210 x 150				1510 x 1210 x 150				1510 x 1510 x 150				2010 x 1510 x 150		
Total weight with packaging (kg)		135				150				173				206				266		

(1) Non-simultaneous options.

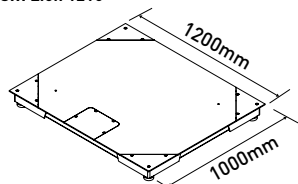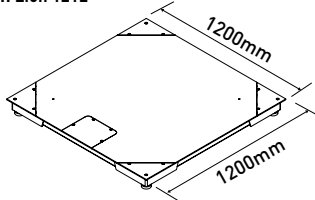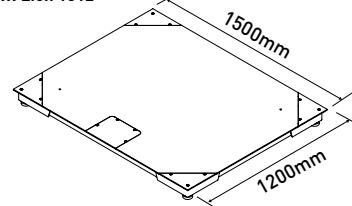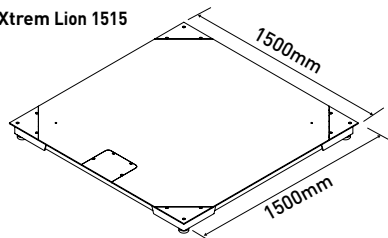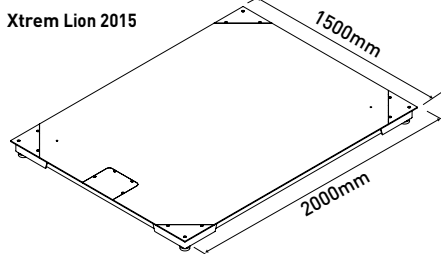**External dimensions (mm)****Xtrem Lion 1210****Xtrem Lion 1212****Xtrem Lion 1512****Xtrem Lion 1515****Xtrem Lion 2015**



## ► XTREM INDICATORS

### K3X indicator

- With CE-M Verification for legal use.
- Classification or check by weight with display in 3 colours.
- Tare memory for weighing tanks and silos.
- Accumulation of weights with totalling.
- Normal or fixed tare, with 20 memories.
- Print-out with 3 lines at the top and 2 lines at the end of the ticket.
- Date and time on ticket records.
- Accumulation of weights with totalling.
- RS232C serial connection for PC and optional printers.
- Optional USB output to PC
- 3-relay digital output and simple, single-speed dispensing.
- ABS casing with IP65 protection.



### K3iX indicator

- With CE-M Verification for legal use.
- Classification or check by weight with display in 3 colours.
- Tare memory for weighing tanks and silos.
- Accumulation of weights with totalling.
- Normal or fixed tare, with 20 memories.
- Print-out with 3 lines at the top and 2 lines at the end of the ticket.
- Date and time on ticket records.
- Accumulation of weights with totalling.
- RS232C serial connection for PC and optional printers.
- Optional USB output to PC
- 3-relay digital output and simple, single-speed dispensing.
- AISI 304 stainless steel casing with IP65 protection.



### K3iX P indicator

- With CE-M Verification for legal use.
- Classification or check by weight with display in 3 colours.
- Tare memory for weighing tanks and silos.
- Accumulation of weights with totalling.
- Normal or fixed tare, with 20 memories.
- Print-out with 3 lines at the top and 2 lines at the end of the page.
- Date and time on ticket records.
- Accumulation of weights with totalling.
- 3-relay digital output and simple, single-speed dispensing.
- AISI 304 stainless steel casing.



## ► SOFTWARE XTREM

### PC Xtrem

- Indicator PC software with CE-M Verification for legal use.
- Scalable display size, can occupy the entire screen.
- Data recording and export in CSV file.
- 3 free data fields to include more information.
- Copies and pastes the weight, or drags it to another window.
- Enter a tare value using the numeric keypad.
- Allows configuration of the balance from the same application.
- Shows several devices connected to the PC simultaneously, each in its own window.
- 10 times higher resolution available on the display.
- Display and export of weight data by QR code on screen.
- No need for a classic indicator; connects directly to the Xtrem scale via the included Z Link cable and an optional PC adapter cable.



### APP Xtrem

- Prints labels (4) and records weights with user name, customer, date/time, product code and net, gross and tare weights.
- Send weight records via email, social networks and most of the Android terminal applications (4).
- Up to 4 Android terminals can be connected via our Xtrem app to the Xtrem balance.
- The application can be connected to any balance, if more than one is available.
- The product bar code can be scanned with the terminal camera (4).
- Has a Tare memory with a name database.
- View weight limits with partial and full screen.
- Export the results obtained to Excel (4).



(4) With Premium options activated.

## ► APP XTREM OPTIONS

### Q1 label printer

- Prints labels from the smartphone with an Android app (4).
- Adds a barcode for the results.
- Autonomy of up to 14 hours on standby and up to 165 labels.
- Bluetooth connection.



(4) With Premium options activated.

## ► ACCESSORIES INDICATOR

### PR4 printer

- Compact thermal printer.
- Printing speed of 130 mm/s.
- Ticket width 58 mm.
- Paper roll capacity up to 83 mm in diameter.
- Connection with K3X and K3iX by cable (included).



### Q2 printer

- Easy paper loading.
- Printing speed: 76 mm/s.
- Detects the beginning of the label.
- Front exit, protected from liquids.
- Maximum capacity 90 mm diameter.
- LED status bar.
- Interchangeable print head without screws.
- Connection with K3X and K3iX by cable (included).



### Traffic light with relay board

- LED indication with 3 adjustable levels for product classification or luminous information on weight differences programmed in the K3X, K3iX and K3iX P indicators.
- Wired connection.



### USB connection


- Data output with USB-A female connector.
- PC compatible.
- USB-A to USB-A cable not included.



## ► INDICATOR SOFTWARE


### EX Link

- PC application for data capture.
- Imports records in CSV or compatible sheet.

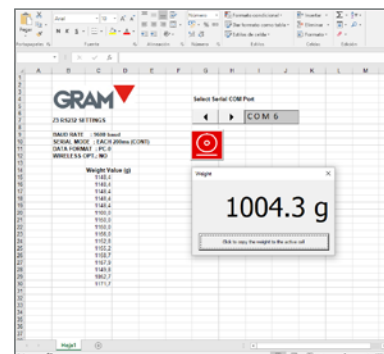

### PW Link

- PC application for viewing and recording data.
- Display with adjustable dimensions - can occupy the entire PC screen width.
- View and record data with date and time.
- Export records to CSV.
- Compatible with K3X and K3iX, includes connection cable.

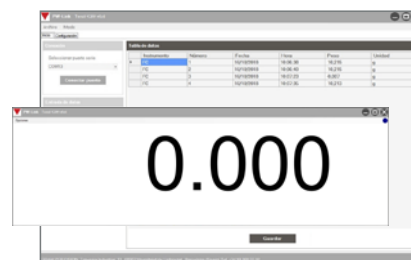

## ► CABLES

### USB Direct K

- Smart direct connection with PC.
- Enter data in any open application on the PC.
- No software needed; the PC recognises the smart cable.
- The data sent includes the measurement unit (g or kg).



## ► CERTIFICATIONS

### ISOCAL certificates

- Our Xtrem equipment is delivered with CE-M Verification as standard.
- We also offer our ISOCAI Certificates, with individualised calibration data for the Xtrem equipment.
- Help maintain your ISO9001 Quality System.





## ► INDICATOR SUPPORTS AND COLUMNS

### ABS ball joint support for K3X

- Adapts the K3X indicator for wall mounting.



### Stainless steel U-shaped bracket for K3iX, K3iX P

- U-shaped bracket for wall mounting of compatible indicators.



### Painted steel base with stainless steel column for K3X

- Supports K3X indicator on a 930 mm tall column.



Indicator not included.

### Painted steel base with stainless steel column for K3iX, K3iX P

- Supports a K3iX or K3iX P indicator on a 930 mm tall column.



Indicator not included.

### Stainless steel base with stainless column for K3X

- Supports K3X indicator on a 930 mm tall column.



Indicator not included.

### Stainless steel base with stainless column for K3iX, K3iX P

- Supports a K3iX or K3iX P indicator on a 930 mm tall column.




Indicator not included.

## ► PLATFORM ACCESSORIES


### Protective surround

- Protects the platform from impacts and accidents.
- One or several sides of the platform can be protected.

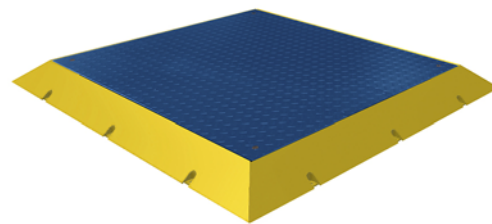


### Steel surround

- Painted steel surround of four perimeter plates and four centring plates for the feet of the scale.
- For recessed installation in the ground.

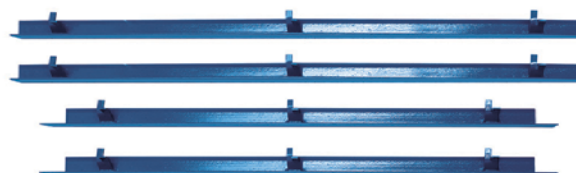

### Integrated frame

- Very robust one-piece painted steel frame, for quick installation of the scale.
- Reduces pit construction and installation time.

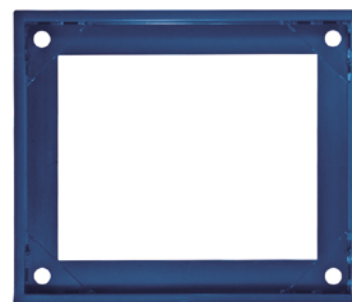

### Practical access ramps

- Two types of ramp: short (RM) with reduced dimensions and long (RL), with double angle for easier access with heavy loads.
- The long ramp (RL) makes access for manual pallet trucks easier and quicker.



### Transport guides

- Guides for transporting the platform with a forklift; facilitates safe transport.
- Factory adaptable for all dimensions.



## ► CERTIFICATIONS

Ref.	Model
8025	ISOICAL certificate from 301 kg to 600 kg
8029	ISOICAL certificate from 601 kg to 1500 kg
8030	ISOICAL certificate from 1501 kg to 3000 kg
8033	ISOICAL certificate from 3001 kg to 10000 kg

## ► XTREM OPTIONS

Ref.	Model
72026A	PC Xtrem software (includes cable to self-powered PC)
33819A	Xtrem Android app (includes WiFi connection and power cable)
71725A	Xtrem Premium app 1 year (includes WiFi connection and power cable)
32351	Z-Link connection 8m
32352	Z-Link connection 15m
71683	WiFi connection (1)
71683A	WiFi connection with power (includes PC Xtrem software) (1)
32377A	Powered Ethernet connection (includes PC Xtrem software) (1)
32382A	RS485 connection with power supply (includes PC Xtrem software) (1)
72034A	Bluetooth printer Q1 labels with Wifi board and Premium app 1 year

## ► PLATFORM ACCESSORIES

Ref.	Model
70190	RM-10 Access Ramp for GL and 1210 models
4267	RM-12 Access Ramp for 1212 and 1512 models
4520	RM-15 Access Ramp for 1515 and 2015 models
71179	RL-10 Access Ramp for GL and 1210 models
71180	RL-12 Access Ramp for 1212 and 1512 models
71181	RL-15 Access Ramp for 1515 and 2015 models
70022	BM-10 Bumper (1m) for GL and 1210 models
70033	BM-12 Bumper (1.2m) for 1210, 1212 and 1512 models
70024	BM-15 Bumper (1.5m) for 1512, 1515 and 2015 models
70022B	Set of 4 BM perimeter protection frames, for model 1210
70033A	Set of 4 BM perimeter protection frames, for model 1212
70033B	Set of 4 BM perimeter protection frames, for model 1512
70024A	Set of 4 BM perimeter protection frames, for model 1515
70195	MP-1210 Pit frame & Anchor plates Kit
70245	MP-1212 Pit frame & Anchor plates Kit
70188	MP-1512 Pit frame & Anchor plates Kit
70189	MP-1515 Pit frame & Anchor plates Kit
70244	MP-2015 Pit frame & Anchor plates Kit
71354	MC-1210 One-piece pit frame
71355	MC-1212 One-piece pit frame
71356	MC-1512 One-piece pit frame
71347	MC-1515 One-piece pit frame
72030	MC-2015 One-piece pit frame
33826	FLP 12 Forklift guides

## ► K3X, K3iX OPTIONS

Ref.	Model
32330	3-relay board
32332	Tare pedal

## ► INDICATOR ACCESSORIES

Ref.	Model
70034X	PR4 wired printer for K3, K3i (2)
70814A	Q2 wired label printer for K3, K3i (2)
70814B	Q2 ticket printer with cable for K3, K3i (2)
60210A	Traffic light with relay board
3792A	EX-Link software (4m cable to PC included)
3792C	EX-Link software (USB output included)
71722A	PW-Link software (4m cable to PC included)
71722G	PW-Link software (USB output included)
61084	Direct K USB cable (2)
33770	USB output (2)
3804X	CS-1 Painted steel support base with stainless steel column for K2, K3, Z3, SC2
3804B	CS-1 Painted steel support base with stainless steel column for K3i, K3i P
3805A	CS-1 S Stainless steel support base with stainless steel column for K2, K3, Z3, SC2
3805X	CS-1 S Stainless steel support base with stainless steel column for K3i, K3i P
32278	Stainless steel U wall support (K3, K3i, K3i P)
31661	Wall support in painted steel with ABS swivel joint (SC2, K2, K3, Z3)

## ► NOTES

(1) Only one of these options can be taken.

(2) Only one of these options can be taken.