

Xtrem Cayman S - M







































- Digital scale with CE-M Verification for legal use and 2 x 3000-division ranges.
- Highly reliable with Z Link communication technology and Xtrem digital core.
 - Fully autonomous, data sent to an indicator, PC, tablet or Android smartphone (1).
 - Maximum safety: important adjustment and calibration data incorporated in the platform are armoured.
 - Web Server to send data to Chrome, Edge and Safari browsers.
 - Total flexibility: Data sent by cable, Ethernet (2), WiFi (2) or RS485 (2).
 - In stainless steel with Class C3 sensors and IP68 protection.
 - Corrosion resistant, versions in AISI 304 and AISI 316 for extreme conditions.
 - Prepared for high connectivity (Industry 4.0)

(1) With Wi-Fi option. (2) Optional.

Hold

Time	Item
09:07:46	7638900295641
12:10:26	7638900295641

View the data on a smartphone

Our Xtrem equipment with WiFi option sends the data directly from the platform to a smartphone using our Android app, directly and without an indicator, from the weighing platform to the smartphone. It's that easy.





Z-Link connectivity

- Multiple connection options with indicators, PC software and Android smartphone.
- Fully digital platforms that include all data in its internal Xtrem module.
- Greater safety and reliability due to digital communication between platform, indicators and PC or Android software.
- Data sent directly to PC or smartphone by optional WiFi in the platform's own Xtrem module.
- Connection of multiple platforms via Wi-Fi or Ethernet router, for central management.
- Web Server for data capture from Chrome, Edge and Safari browsers.

Protected connection with stainless steel tube

- The Z Link connection cable is protected along most of its length by a plastic-coated steel tube.
- \bullet Excellent adaptation to the platform output for greater robustness.
- Guarantees proper communication of your Xtrem equipment with peripherals. Digital data are not influenced by bad connections or other equipment.






Digital core

- Xtrem digital module integrated inside the platform structure.
- The most advanced technology for maximum data security.



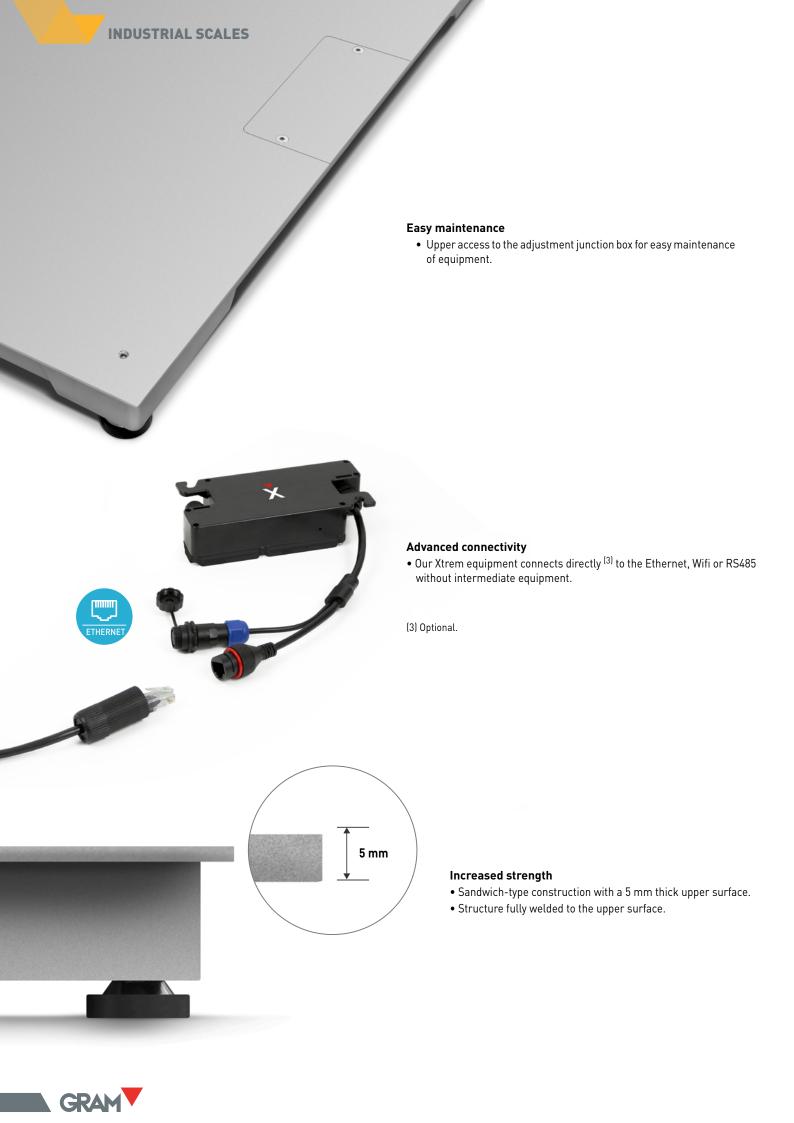

Extra-long Z Link cables

- The standard Z Link digital connection cable can be replaced with longer ones of 8 and 15 m.
- Allows replacement in case of failure or breakage, due to its sealed connection and quick connectors.







4 m Z Link cable as standard.


Optional 8m Z Link cable.

Optional 15m Z Link cable.

Model M	Xtrem Cayman-S C	Xtrem Cayman-S	Xtrem Cayman-S	Xtrem Cayman-S	Xtrem Cayman-S	Xtrem Cayman-S	Xtrem Cayman-S	Xtrem Cayman-S	Xtrem Cayman-S	Xtrem Cayman-S	Xtrem Cayman-S	Xtrem Cayman-S	Xtrem Cayman-S	Xtrem Cayman-S	Xtrem Cayman-S	Xtrem Cayman-S
Model M	1210-1.5T /4	1210-3T /4	1212-1.5T /4	1212-3T /4	1512-1.5T /4	1512-3T /4	1515-1.5T /4	1515-3T /4	1210-1.5T /16	1210-3T /16	1212-1.5T /16	1212-3T /16	1512-1.5T /16	1512-3T /16	1515-1.5T /16	1515-3T /16
Reference	71708M	71709M	71710M	71711M	71712M	71713M	71714M	71715M	71719M	72003M	72004M	72005M	72006M	72007M	71720M	71721M
Capacity / max (kg)	600/1500	1500/3000	600/1500	1500/3000	600/1500	1500/3000	600/1500	1500/3000	600/1500	1500/3000	600/1500	1500/3000	600/1500	1500/3000	600/1500	1500/3000
Resolution / e (g)	200/500	500/1000	200/500	500/1000	200/500	500/1000	200/500	500/1000	200/500	500/1000	200/500	500/1000	200/500	500/1000	200/500	500/1000
Weighing units	g, kg															
Class	0IML (III)															
Maximum error (g)		± 0,1%														
Tare range (g)	- Max ₂															
Connectivity		RS232C, Ethernet ^[1] , WiFi ^[1] , RS485 ^[1]														
Transmission speed							9600, 1920	0, 38400, 5	57600, 115	200 bauds						
Power						Ada	pter 230 V/	50 Hz (Eur	o) 7.5 Vdc (or via indic	ator					
Working temperature								-10°C /	/+40°C							
Upper surface thickness								5 m	nm							
Structure	AISI 304 stainless steel AISI 316 stainless steel															
Load sensors		4 x SQB SS IP68														
Connections box	Hermetic with IP68 protection, in AISI 304 stainless steel						Hermetic with IP68 protection, in AISI 316 stainless steel									
Dim. platform (mm)	1200 x	1000	1200 x	1200	1500 x	1200	1500 x	1500	1200 >	(1000	1200 x	1200	1500 >	(1200	1500 >	c 1500
Minimum height	105															
Maximum height	115															
Platform net weight (kg)	91		10	17	12	.9	15	i5	9	1	10)7	12	29	15	55
Packaging dim. (mm)	1300 x 110	00 x 310	1300 x 13	800 x 310	1600 x 13	800 x 310	1600 x 16	00 x 310	1300 x 11	00 x 310	1300 x 13	300 x 310	1600 x 13	300 x 310	1600 x 16	300 x 310
Total weight with packaging (kg)	112	2	12	28	15	i6	18	18	11	12	12	28	15	56	18	38

(1) Non-simultaneous options.

External dimensions (mm)

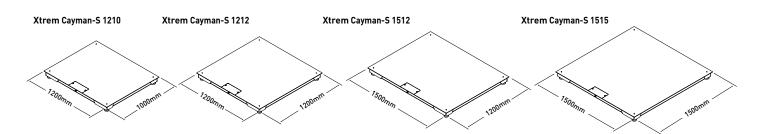



> XTREM INDICATORS

K3X indicator

- With CE-M Verification for legal use.
- Classification or check by weight with display in 3 colours.
- Tare memory for weighing tanks and silos.
- Accumulation of weights with totalling.
- Normal or fixed tare, with 20 memories.
- Print-out with 3 lines at the top and 2 lines at the end of the ticket.
- Date and time on ticket records.
- Accumulation of weights with totalling.
- RS232C serial connection for PC and optional printers.
- Optional USB output to PC
- 3-relay digital output and simple, single-speed dispensing.
- ABS casing with IP65 protection.







































- With CE-M Verification for legal use.
- Classification or check by weight with display in 3 colours.
- Tare memory for weighing tanks and silos.
- Accumulation of weights with totalling.
- Normal or fixed tare, with 20 memories.
- Print-out with 3 lines at the top and 2 lines at the end of the ticket.
- Date and time on ticket records.
- Accumulation of weights with totalling.
- RS232C serial connection for PC and optional printers.
- Optional USB output to PC
- 3-relay digital output and simple, single-speed dispensing.
- AISI 304 stainless steel casing with IP65 protection.











































K3iX P indicator

- With CE-M Verification for legal use.
- Classification or check by weight with display in 3 colours.
- Tare memory for weighing tanks and silos.
- Accumulation of weights with totalling.
- Normal or fixed tare, with 20 memories.
- Print-out with 3 lines at the top and 2 lines at the end of the page.
- Date and time on ticket records.
- Accumulation of weights with totalling.
- 3-relay digital output and simple, single-speed dispensing.
- AISI 304 stainless steel casing.







































► SOFTWARE **XTREM**

PC Xtrem

- Indicator PC software with CE-M Verification for legal use.
- Scalable display size, can occupy the entire screen.
- Data recording and export in CSV file.
- 3 free data fields to include more information.
- Copies and pastes the weight, or drags it to another window.
- Enter a tare value using the numeric keypad.
- Allows configuration of the balance from the same application.
- Shows several devices connected to the PC simultaneously, each in its own window.
- 10 times higher resolution available on the display.
- Display and export of weight data by QR code on screen.
- No need for a classic indicator; connects directly to the Xtrem scale via the included Z Link cable and an optional PC adapter cable.



APP Xtrem

- Prints labels (4) and records weights with user name, customer, date/time, product code and net, gross and tare weights.
- Send weight records via email, social networks and most of the Android terminal applications (4).
- Up to 4 Android terminals can be connected via our Xtrem app to the Xtrem balance.
- The application can be connected to any balance, if more than one is available.
- The product bar code can be scanned with the terminal camera [4].
- Has a Tare memory with a name database.
- View weight limits with partial and full screen.
- Export the results obtained to Excel (4).




(4) With Premium options activated.

► APP XTREM **OPTIONS**

Q1 label printer

- Prints labels from the smartphone with an Android app (4).
- Adds a barcode for the results.
- Autonomy of up to 14 hours on standby and up to 165 labels.
- Bluetooth connection.







► ACCESSORIES INDICATOR

PR4 printer

- Compact thermal printer.
- Printing speed of 130 mm/s.
- Ticket width 58 mm.
- Paper roll capacity up to 83 mm in diameter.
- Connection with K3X and K3iX by cable (included).



Q2 printer

- Easy paper loading.
- Printing speed: 76 mm/s.
- Detects the beginning of the label.
- Front exit, protected from liquids.
- Maximum capacity 90 mm diameter.
- LED status bar.
- Interchangeable print head without screws.
- Connection with K3X and K3iX by cable (included).



Traffic light with relay board

- LED indication with 3 adjustable levels for product classification or luminous information on weight differences programmed in the K3X, K3iX and K3iX P indicators.
- Wired connection.



USB connection

- Data output with USB-A female connector.
- PC compatible.
- USB-A to USB-A cable not included.






► INDICATOR SOFTWARE

EX Link

- PC application for data capture.
- Imports records in CSV or compatible sheet.

PW Link

- PC application for viewing and recording data.
- Display with adjustable dimensions can occupy the entire PC screen width
- View and record data with date and time.
- Export records to CSV.
- Compatible with K3X and K3iX, includes connection cable.

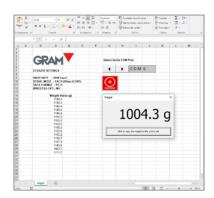



▶ CABLES

USB Direct K

- Smart direct connection with PC.
- Enter data in any open application on the PC.
- No software needed; the PC recognises the smart cable.
- The data sent includes the measurement unit (g or kg).



► CERTIFICATIONS

ISOCAL certificates

- Our Xtrem equipment is delivered with CE-M Verification as standard.
- We also offer our ISOCAL Certificates, with individualised calibration data for the Xtrem equipment.
- Help maintain your ISO9001 Quality System.





► INDICATOR COLUMNS

Painted steel base with stainless steel column for K3X

• Supports K3X indicator on a 930 mm tall column.



Painted steel base with stainless steel column for K3iX, K3iX P

• Supports a K3iX or K3iX P indicator on a 930 mm tall column.



Stainless steel base with stainless column for K3X

• Supports K3X indicator on a 930 mm tall column.



Stainless steel base with stainless column for K3iX, K3iX P

• Supports a K3iX or K3iX P indicator on a 930 mm tall column.



Indicator not included.



ABS ball joint support for K3X

• Adapts the K3X indicator for wall mounting.



Stainless steel U-shaped bracket for K3iX, K3iX P

U-shaped bracket for wall mounting of compatible indicators.



Steel surround

- Painted steel surround of four perimeter plates and four centring plates for the feet of the scale.
- For recessed installation in the ground.











Practical access ramps

• The long ramp (RL) makes access for manual pallet trucks easier and quicker.



Transport guides

- Guides for transporting the platform with a forklift; facilitates safe transport.
- Factory adaptable for all dimensions.



INDUSTRIAL SCALES

CERTIFICATIONS

Ref.	Model
8029	ISOCAL certificate from 601 kg to 1500 kg
8030	ISOCAL certificate from 1501 kg to 3000 kg

K3X, K3iX OPTIONS

Ref.	Model
32330	3-relay board
32332	Tare pedal

► XTREM OPTIONS

Ref.	Model
72026A	PC Xtrem software (includes cable to self-powered PC)
33819A	Xtrem Android app (includes WiFi connection and power cable)
71725A	Xtrem Premium app 1 year (includes WiFi connection and power cable)
32351	Z-Link connection 8m
32352	Z-Link connection 15m
71683	WiFi connection (1)
71683A	WiFi connection with power (includes PC Xtrem software) [1]
32377A	Powered Ethernet connection (includes PC Xtrem software) (1)
32382A	RS485 connection with power supply (includes PC Xtrem software) [1]
72034A	Bluetooth printer Q1 labels with Wifi board and Premium app 1 year

► INDICATOR ACCESSORIES

Ref.	Model
70034X	PR4 wired printer for K3, K3i (2)
70814A	Q2 wired label printer for K3, K3i (2)
70814B	Q2 ticket printer with cable for K3, K3i (2)
60210A	Traffic light with relay board
3792A	EX-Link software (4m cable to PC included)
3792C	EX-Link software (USB output included)
71722A	PW-Link software (4m cable to PC included)
71722G	PW-Link software (USB output included)
61084	Direct K USB cable (2)
33770	USB output (2)
3804X	CS-1 Painted steel support base with stainless steel column for K2, K3, Z3, SC2
3804B	CS-1 Painted steel support base with stainless steel column for K3i, K3i P
3805A	CS-1 S Stainless steel support base with stainless steel column for K2, K3, Z3, SC2
3805X	CS-1 S Stainless steel support base with stainless steel column for K3i, K3i P
32278	Stainless steel U wall support (K3, K3i, K3i P)
31661	Wall support in painted steel with ABS swivel joint (SC2, K2, K3, Z3)

► PLATFORM ACCESSORIES

Ref.	Model
71183	RLI-10 Stainless steel ramp, models 1210 and GLI
71184	RLI-12 Stainless steel ramp, models 1212 and 1512
71185	RLI-15 Stainless steel ramp, models 1515 and 2015
60985	MPI-1210 Stainless steel plate surround
70925	MPI-1212 Stainless steel plate surround
4843	MPI-1512 Stainless steel plate surround
70807	MPI-1515 Stainless steel plate surround
71943	FLI 12 Stainless steel forklift guides

► NOTES

(1) Only one of these options can be taken.

(2) Only one of these options can be taken.

gram-group.com

