

RX Fox




RX Fox 120



Weigh bars for large, heavy structures

For weighing rigid structures, cages or long objects.

- Highly resistant, steel structure with epoxy treatment.
- Load cells in nickel-plated steel and IP67 protection.
- Dimensions of 800 or 1200 mm in length.
- With LED display RX indicator and 400 cm cable.
- 3000 kg capacity and 0.5 kg resolution on-screen.
- With wheels and handle for easy transport, except for the RX Fox H model.
- Operating time with internal batteries, up to 50 hours.
- Very bright weight display with 20 mm LED digits.
- Designed in Europe and manufactured by Gram Group.

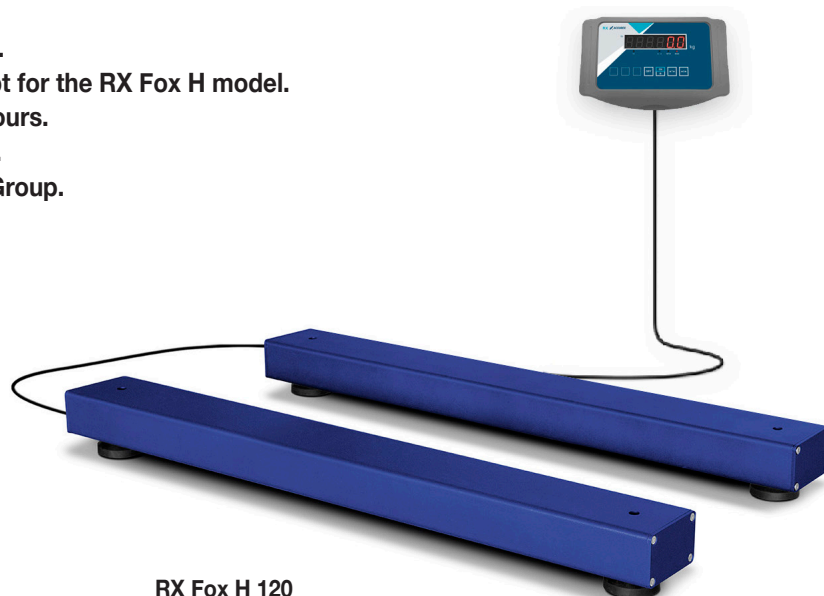

RX Fox H 120

Accurex RX Fox scales are for professional use and withstand robust, intensive handling. They are made of a rigid, durable tubular steel structure with epoxy treatment.



The **RX electronic display**, with a 4 m cable, can be placed on a bench or wall with optional support. Weighing response is extremely fast, in less than 2 seconds, and shows a stable, accurate weight.



RX Fox 80




RX Fox

It is powered by a 220 V mains supply and includes an internal battery which is recharged via the mains cable. The battery recharges when connected to the mains while the scale is being used.

Zero adjustment function. Possibility of zeroing the device to zero by pressing a key.

Tare function. The weight of the pallet can be discounted by pressing the tare key.


Serial calibration. The device is supplied calibrated and adjusted by our Barcelona calibration laboratory (audited annually by the European notified body NMI).

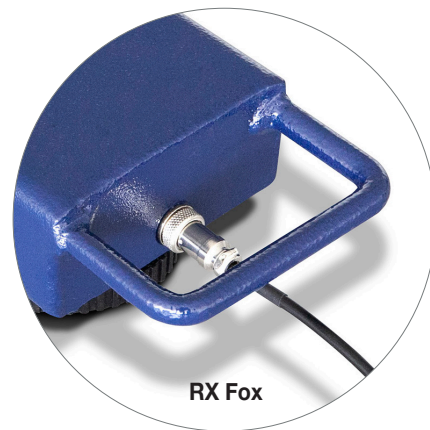

RX Fox



RX Fox H 80

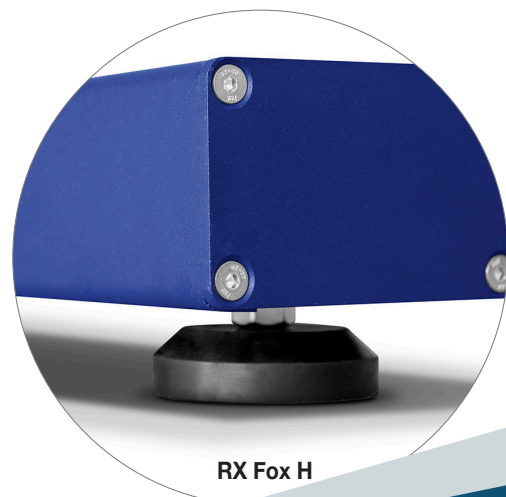

RX Fox H

Operational functions

- Zero adjustment.
- Container taring with tare memory.

Technical features

Model	RX Fox 80-3T	RX Fox 120-3T	RX Fox H 80-3T	RX Fox H 120-3T
Reference	71950	71951	6048	6068
Capacity	3000 kg	3000 kg	3000 kg	3000 kg
Resolution	500 g	500 g	500 g	500 g
Weighing units	kg			
Power	Mains 220 V, 50 Hz			
Working temperature	0°C / +40°C			
Structure	Steel with baked epoxy paint			
Load sensors	4 Xcell XF cells			
Connections box	sealed in ABS			
Structure thickness (mm)	5		3.5	
Dim. weighing area (mm)	(2x) 810 x 120	(2x) 1210 x 120	(2x) 800 x 130	(2x) 1200 x 150
Minimum height (mm)	85		105	
Maximum height (mm)	100		115	
Platform net weight (kg)	(2x) 11	(2x) 16	(2x) 12	(2x) 25
Packaging dim. (mm)	180 x 1120 x 140	180 x 1370 x 140	820 x 280 x 135	1220 x 320 x 135
Total weight with packaging (kg)	23	33	25	52

Platform accessories

Ref.	Accessories
31675	Feet with ball joint for FOX (unit)
36739	Feet with ball joint for FOX (Pack of 4)

External dimensions (mm)

