


RX Tiger

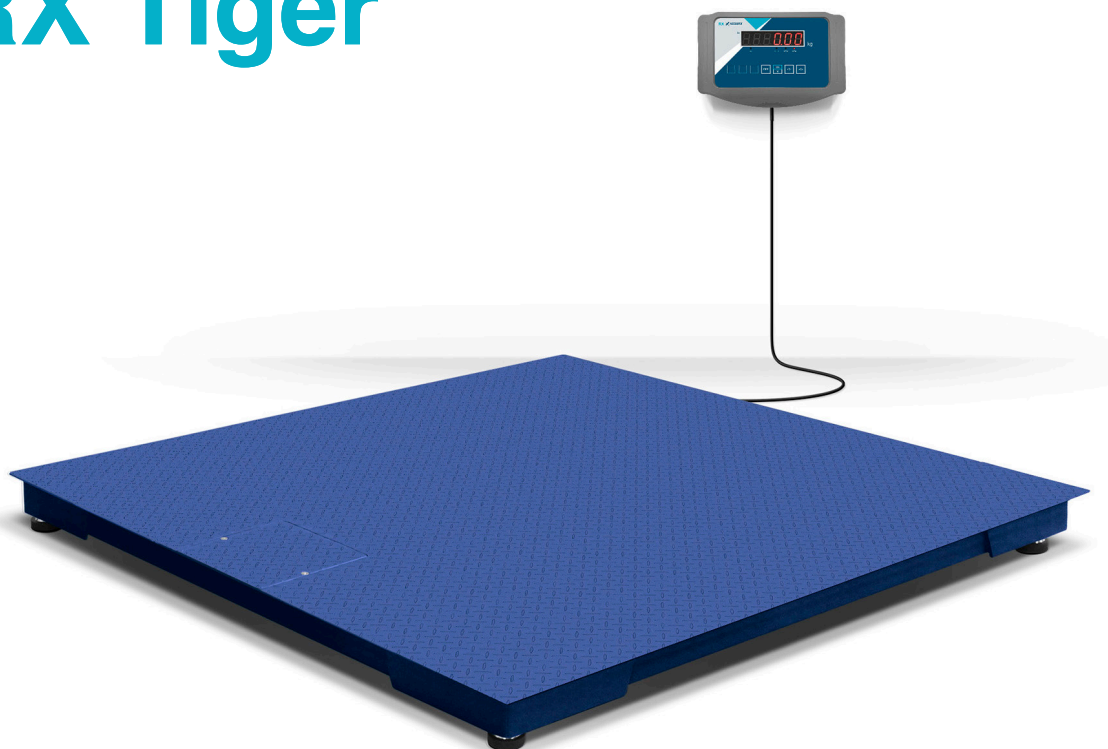

Heavy duty floor scales


Suitable for weighing pallets and heavy loads, with a capacity of up to 3,000 kg

- Floor weighing platform with 4 load sensors.
- Highly robust sandwich-type structure with epoxy treatment.
- OIML R-60 class C load cells in nickel-plated steel and IP67 protection.
- ABS junction box with IP66 protection.
- Feet with adjustable height to adapt it to the surface of use.
- With LED display RX indicator and 400 cm cable.

Accurex RX Tiger scales are products for professional use, and are made with a lacquered steel structure which can withstand robust, intensive treatment.

The highly reliable **RX electronic display** includes a 4 m long cable so it can be located away from the platform. Weighing response is extremely fast, in less than 2 seconds, and shows a stable, accurate weight.



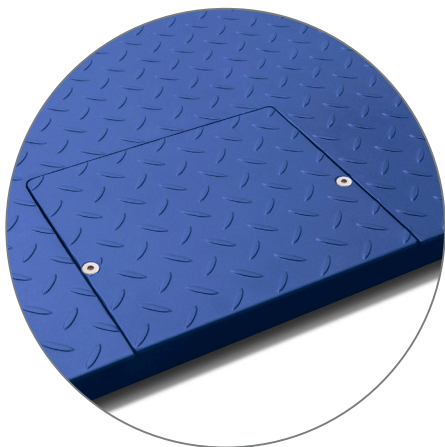

Operational functions

- Zero adjustment.
- Container taring with tare memory.

It is powered by a 220 V mains supply and includes an internal battery which is recharged via the mains cable. The battery recharges when connected to the mains while the scale is being used.

Zero adjustment function. Possibility of zeroing the device to zero by pressing a key.


Tare function. The weight of an empty pallet or any other container can be discounted by pressing the tare key.

Serial calibration. The device is supplied calibrated and adjusted by our Barcelona calibration laboratory (audited annually by the European notified body NMI).

Technical features

Model	RX Tiger 88 - 300	RX Tiger 88 - 600	RX Tiger 108 - 600	RX Tiger 1010 - 600	RX Tiger 1010 - 1,5T	RX Tiger 1010 - 3T	RX Tiger 1210 - 1,5T	RX Tiger 1210 - 3T	RX Tiger 1212 - 1,5T	RX Tiger 1212 - 3T	RX Tiger 1512 - 1,5T	RX Tiger 1512 - 3T	RX Tiger 1515 - 1,5T	RX Tiger 1515 - 3T
Reference	71763	71764	71967	71765	71766	71968	71767	71768	71769	71770	71771	71772	71773	71774
Capacity	300 kg	600 kg	600 kg	600 kg	1500 kg	3000 kg	1500 kg	3000 kg	1500 kg	3000 kg	1500 kg	3000 kg	1500 kg	3000 kg
Resolution	50 g	100 g	100 g	100 g	200 g	500 g	200 g	500 g	200 g	500 g	200 g	500 g	200 g	500 g
Weighing units	kg													
Power	Mains 220 V, 50 Hz													
Working temperature	0°C / +40°C													
Structure	Steel with baked epoxy paint													
Load cells	4 H8C Rebel cells													
Junction box	ABS with IP65 protection													
Dim. platform (mm)	800 x 800	1000 x 800	1000 x 1000	1000 x 1000	1000 x 1000	1000 x 1000	1200 x 1000	1200 x 1000	1200 x 1200	1200 x 1200	1500 x 1200	1500 x 1200	1500 x 1500	1500 x 1500
Minimum height (mm)	112						104							
Maximum height (mm)	117						119							
Platform net weight (kg)	45	47	49	49	49	49	64	64	73	73	89	89	105	105
Packaging dim. (mm)	810 x 810 x 260	1010 x 810 x 260	1010 x 810 x 260	1010 x 1010 x 260	1010 x 1010 x 260	1010 x 1010 x 260	1210 x 1010 x 150	1210 x 1010 x 150	1210 x 1210 x 150	1210 x 1210 x 150	1510 x 1210 x 150	1510 x 1210 x 150	1510 x 1510 x 150	1510 x 1510 x 150
Total weight with packaging (kg)	65	67	67	69	69	69	76	76	88	88	107	107	127	127

External dimensions (mm)

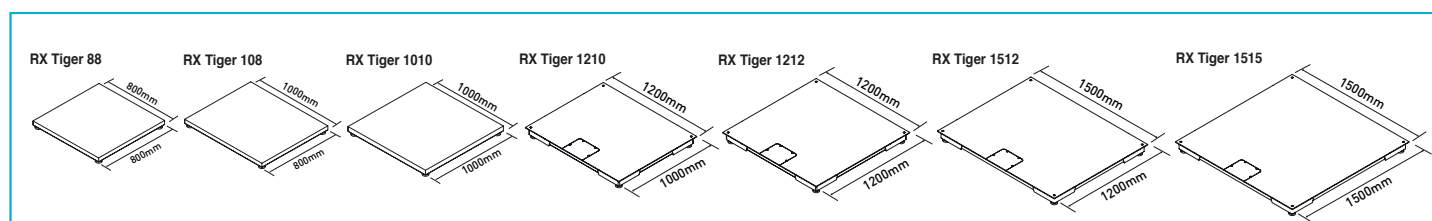

Platform accessories



Ramp RM



Ramp RL

Practical access ramps


- Two types of ramp: short (RM) with reduced dimensions and long (RL), with double angle for easier access with heavy loads.
- The long ramp (RL) makes access for manual pallet trucks easier and quicker.

Ref.	Ramps RM
7006	RM-8 Access Ramp for 88 model
70190	RM-10 Access Ramp for 1010 and 1210 models
4267	RM-12 Access Ramp for 1210 and 1512 models
4520	RM-15 Access Ramp for 1512 and 1515 models




Ramp RM

Ref.	Ramps RL
71178	RL-8 Access Ramp for 88 model
71179	RL-10 Access Ramp for 1010 and 1210 models
71180	RL-12 Access Ramp for 1210 and 1512 models
71181	RL-15 Access Ramp for 1512 and 1515 models

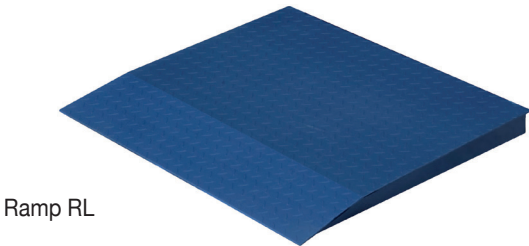

Ramp RL

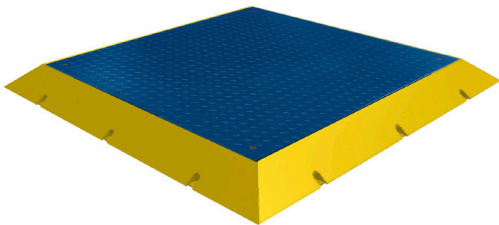

Note: The image features two units. Each unit is sold separately.

Protective surround

- Protects the platform from impacts and accidents.
- One or several sides of the platform can be protected.

Ref.	Protective frame
70022	BM-10 Protective surround, 1m for 1010 and 1210 models
70033	BM-12 Protective surround, 1.2m for 1210 and 1512 models
70024	BM-15 Protective surround, 1.5m for 1512 and 1515 models
70022A	Set of 4 BM perimeter protection frames, for model 1010
70022B	Set of 4 BM perimeter protection frames, for model 1210
70033B	Set of 4 BM perimeter protection frames, for model 1512
70024A	Set of 4 BM perimeter protection frames, for model 1515