


RXT

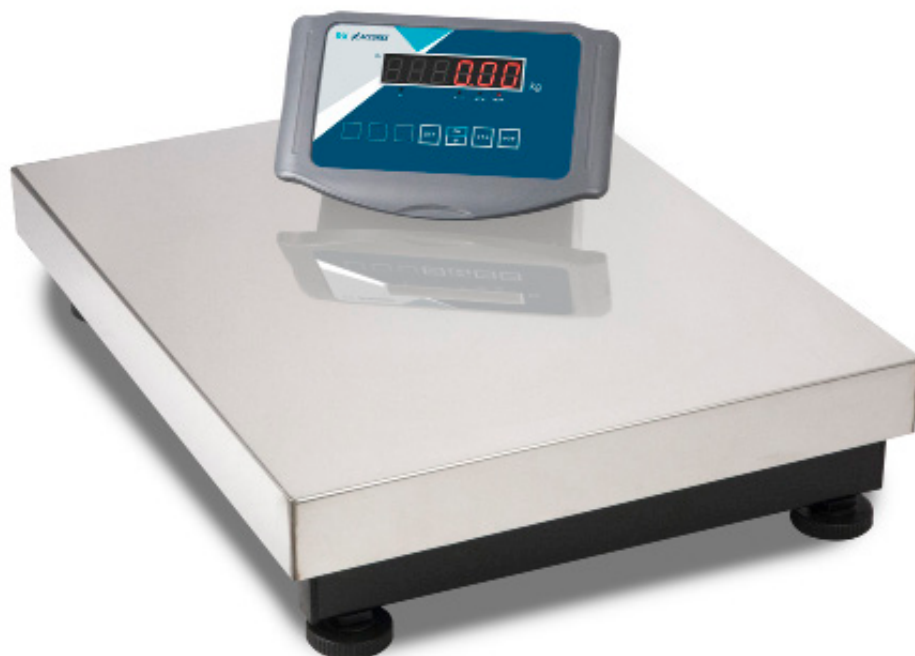

Industrial benchtop scale

For weighing portions, checking the weight of products and small packages or weighing mixtures and additives.

- Industrial scale with platform and separate display.
- Capacity from 15 to 150 kg with a weighing plate of different dimensions, depending on the model.
- Autonomous operation with internal battery that provides 50 hours of operation without recharging.
- Very bright weight display with 20 mm LED digits.
- Aluminium load sensor and durable electronics for intensive industrial use.
- Designed in Europe and manufactured by Gram Group.

Accurex RXT scales are for professional use and withstand robust, intensive handling. They are made of lacquered steel and stainless steel in its structure.


Highly reliable **RX electronic display** can be located away from the platform or on its front. Weighing response is extremely fast, in less than 2 seconds, and shows a stable, accurate weight.



Operational functions

- Zero adjustment.
- Container taring with tare memory.

It is powered by a 220 V mains supply and includes an internal battery which is recharged via the mains cable. The battery recharges when connected to the mains while the scale is being used.

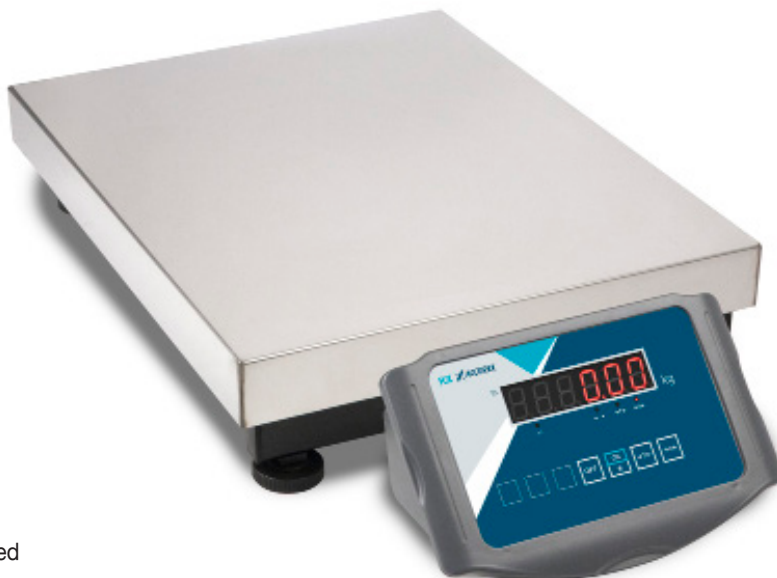

Zero adjustment function. Possibility of zeroing the device to zero by pressing a key.

Tare function. The container or box weight can be deducted by pressing the tare key.

Serial calibration. The device is supplied calibrated and adjusted by our Barcelona calibration laboratory (audited annually by the European notified body NMI).

Technical features

Model	RXT-15S	RXT-30S	RXT-60S	RXT-150S	RXT-30M	RXT-60M	RXT-150M
Capacity (kg)	15	30	60	150	30	60	150
Resolution (g)	2	5	10	20	5	10	20
Weighing units	kg						
Structure material	lacquered steel						
Plate material	stainless steel						
Indicator material	ABS						
Weighing platform dimensions (mm)	400 x 300				500 x 400		
Indicator dimensions (mm)	255 x 165 x 110				255 x 165 x 110		
Platform height (mm)	110				110		
Total height (mm)	140				140		
Display net weight (kg)	1.2				1.2		
Platform net weight (kg)	4.1				7.9		
Dimensions with packaging (mm)	600 x 335 x 150				700 x 410 x 150		
Total weight with platform packaging (kg)	6.2				10		

External dimensions (mm)

