


TXM Tiger

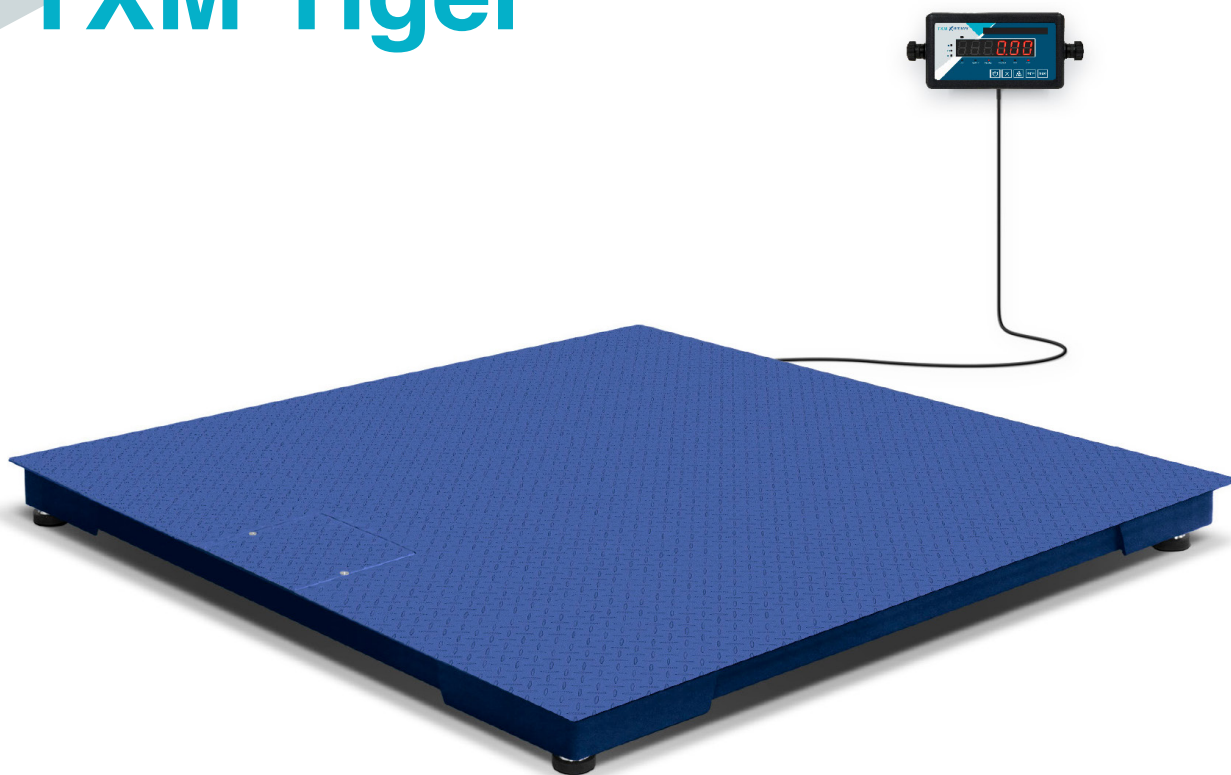

Floor scale with CE-M verification for legal use For weighing pallets and heavy loads, with a capacity of up to 2,500 kg

- Floor platform with CE-M verification and autonomy of more than 80 hours of use.
- Highly resistant sandwich structure, with epoxy treatment.
- OIML R-60 class C load sensors in nickel-plated steel, IP65 protection.
- With LED digit TXM indicator and 400 cm long cable.
- Piece counting with free sampling.
- Digital filter for weighing animals in motion.
- Built-in Ni-MH battery.

Accurex TXM Tiger scale models are products for legal use, **CE-M Verified as standard**. Manufactured from epoxy-treated steel construction, they include the TXM electronic indicator and withstand hard and intensive treatment.

The **TXM indicator in legal metrology**, with 4 metres of cable length, can be positioned at a distance from the platform. The response of the weighing is extremely fast, in less than 2 seconds it shows the stable weight accurately.



Main features

Easy maintenance. Upper access to the adjustment junction box for easy maintenance of equipment.

Non-slip. Its diamond plate steel surface with baked epoxy paint treatment gives it great wear resistance.

Main functions

Weighing of animals in motion. Allows the weighing of animals on the platform, by means of a digital filter that averages and displays the final weight value, once the calculation operations have been carried out.

Counting of pieces. It calculates the number of pieces from a sample taken in advance.

CE-M Verified as standard. The equipment is supplied properly calibrated and sealed for use in applications where this certification is required.

Tare of containers and containers, to display the net weight.

It is powered by 220V mains and also by its internal Ni-MH battery which is recharged by the same mains cable. While the scale is being used connected to the mains, its battery is being recharged simultaneously.




Technical features

Model	TXM Tiger 88 - 600	TXM Tiger 1010 - 1,5T	TXM Tiger 1210 - 1,5T	TXM Tiger 1210 - 2,5T	TXM Tiger 1512 - 1,5T	TXM Tiger 1512 - 2,5T	TXM Tiger 1515 - 1,5T	TXM Tiger 1515 - 2,5T
Reference	72142	72143	72144	72145	72146	72147	72148	72149
Capacity / Max (kg)	600 kg	1500 kg	1500 kg	2500 kg	1500 kg	2500 kg	1500 kg	2500 kg
Resolution / e (g)	200 g	500 g	500 g	1000 g	500 g	1000 g	500 g	1000 g
Weighing units	g, kg							
Maximum error (g)	+ 0,1 %							
Tare range (g)	- Max							
Power	Mains 220V 50 Hz							
Working temperature	-10°C / +40°C							
Structure	Steel with baked epoxy paint							
Load sensors	4 x H8C Rebel IP65							
Connections box	Hermetic ABS with IP65 protection							
Dim. plataforma (mm)	800 x 800	1000 x 1000	1200 x 1000		1500 x 1200		1500 x 1500	
Minimum height (mm)	112			104				
Maximum height (mm)	117			119				
Platform net weight (kg)	45	49	64		89		105	
Packaging dimensions (mm)	810 x 810 x 260	1010 x 1010 x 260	1210 x 1010 x 150		1510 x 1210 x 150		1510 x 1510 x 150	
Total weight with packaging ¹ (kg)	65	69	76		107		127	

(1) Product in a single package. The platform includes the indicator and accessories inside, accessible from the bottom.

External dimensions (mm)

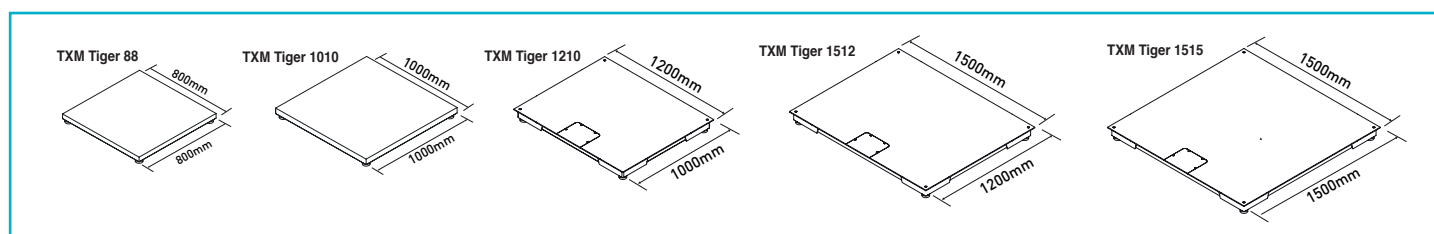

Platform accessories



Ramp RM




Ramp RL

Practical access ramps


- Two types of ramp: short (RM) with reduced dimensions and long (RL), with double angle for easier access with heavy loads.
- The long ramp (RL) makes access for manual pallet trucks easier and quicker.

Ref.	Ramps RM
7006	RM-8 Access Ramp for 88
70190	RM-10 Access Ramp for 1010 and 1210
4267	RM-12 Access Ramp for 1210 and 1512
4520	RM-15 Access Ramp for 1512 and 1515

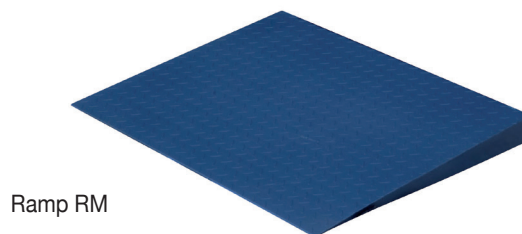


Ramp RM

Ref.	Ramps RL
71178	RL-8 Access Ramp for 88
71179	RL-10 Access Ramp for 1010 and 1210
71180	RL-12 Access Ramp for 1210 and 1512
71181	RL-15 Access Ramp for 1512 and 1515

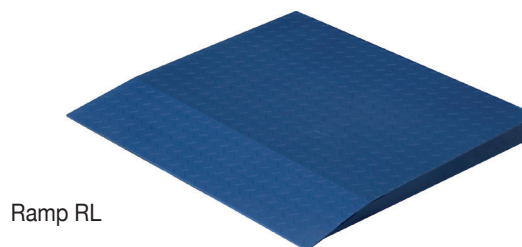

Ramp RL

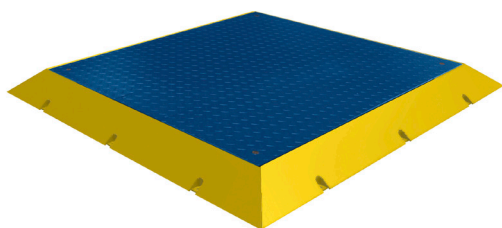

Note: The image shows two units, sold separately.

Protective surround

- Protects the platform from impacts and accidents.
- One or several sides of the platform can be protected.

Ref.	Bumpers
70022	BM-10 Bumper 1m for model 1010 and 1210
70033	BM-12 Bumper 1,2m for model 1210 and 1512
70024	BM-15 Bumper 1,5m for model 1512 and 1515
70022A	Set of 4 BM bumpers for perimeter protection for model 1010
70022B	Set of 4 BM bumpers for perimeter protection for model 1210
70033B	Set of 4 BM bumpers for perimeter protection for model 1512
70024A	Set of 4 BM bumpers for perimeter protection for model 1515