




# K3X



## Legally approved digital viewer

- Compatible with Xtrem® digital weighing equipment.
- High reliability thanks to its Z Link® digital communication technology.
- With CE-M Verification for legal use.
- Memory of 20 preset tares.
- High resolution display (shows one decimal place added).
- Sorting or checking by weight with green and red display.
- Animal weighing function and adaptive filters for unstable situations.
- Zero memory, for weighing silos and tanks.
- Program for dosing a product at two speeds.
- Compatible with label and ticket printers (Q2 and PR4).
- Ticket printing with three top lines and one bottom line.
- Programming of fixed ticket information lines from Windows.
- It prints a ticket with date, time and totalisation of the weighs carried out.
- Optional USB connection.

## Xtrem® digital connection

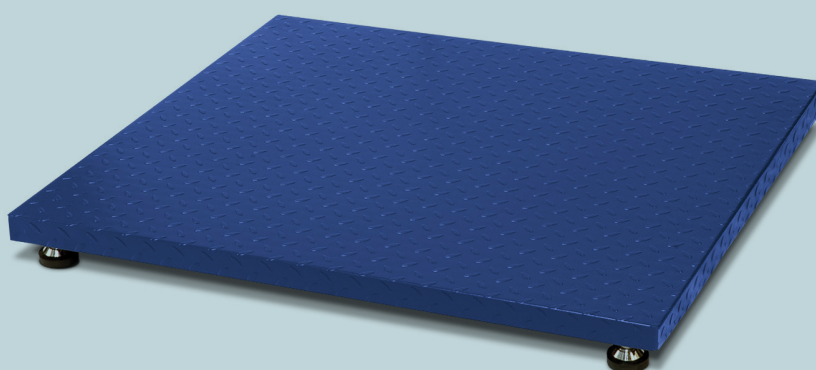

**XTREM**  
DIGITAL WEIGHING TECHNOLOGY

**ZLINK**  
DIGITAL CONNECTION

- Compatible with all Xtrem equipment for fully digital and reliable communication.
- Thanks to its ZLink® communication technology, the K3X M indicator can be connected to any Xtrem device without the need for calibration, fully digitally.



ZLink® 4m cable (Included)



ZLink® 6m cable (Not included)




ZLink® 8m cable (Not included)





Data output to PC via keyboard compatible connection, allowing the weight value information to be sent to any application running on the PC.

- This is an intelligent direct PC connection.
- The data reaches whatever application is in use at the time.
- No software required, the smart cable with USB connection is recognised by the PC's Windows operating system.

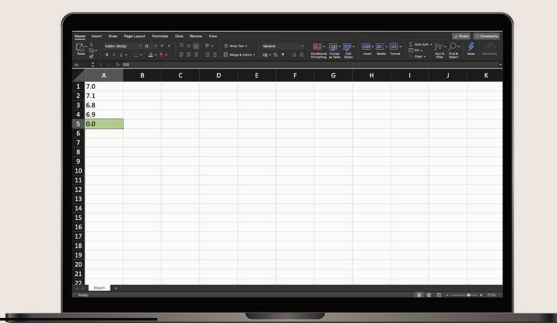


## Weight limit warning

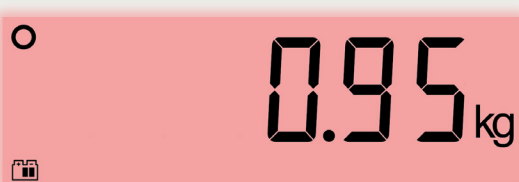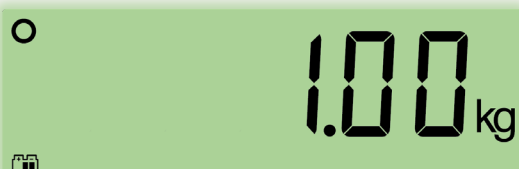

Connection with compatible printers for ticket and label printing, with three header lines and one footer line, which are programmed from software on PC with Windows 7 OS or higher.


## PR4 Printer

- Ticket printing.
- Compact thermal printer.
- Printing speed of 130 mm/second.
- Ticket width 58 mm.
- Paper roll capacity up to 83 mm diameter.
- Cable connection (included).

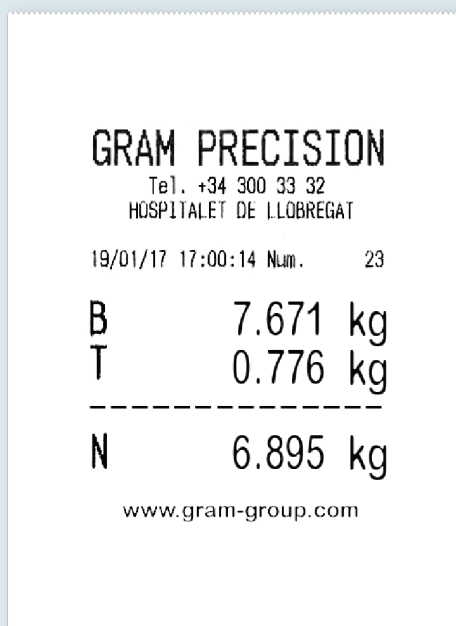

## Q2 Printer

- Ticket and label printing.
- Easy loading of paper and labels.
- Print speed: 76 mm/s.
- Detects the start of the label.
- Front outlet, protected from liquids.
- Maximum capacity 90 mm diameter.
- LED bar to show its status.
- Screwless interchangeable printhead.
- Cable connection (included).

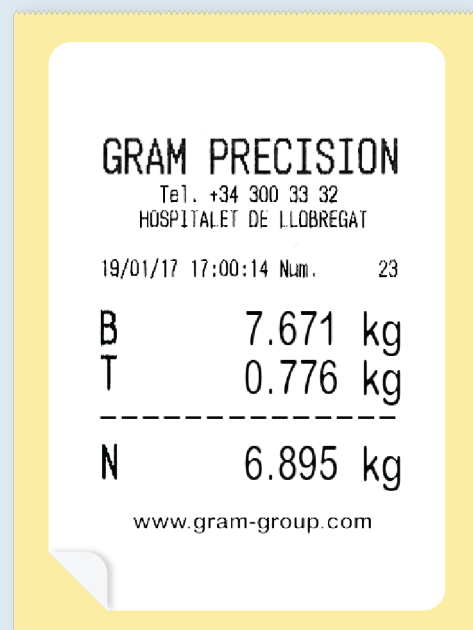



## USB connection

**OPTIONAL**




- Data output with USB-A female connector.
- PC compatible.
- USB-A to USB-A cable not included.


## High resolution

Displays 10 times higher resolution when pressing a key for a few seconds.



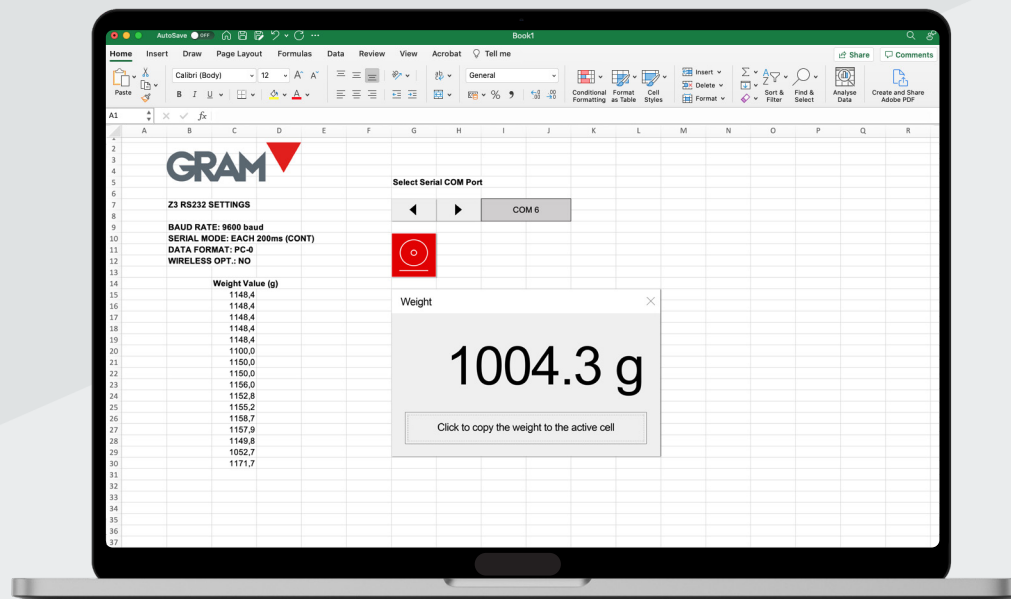

- PC data capture application.
- Import the records into a CSV or compatible sheet.

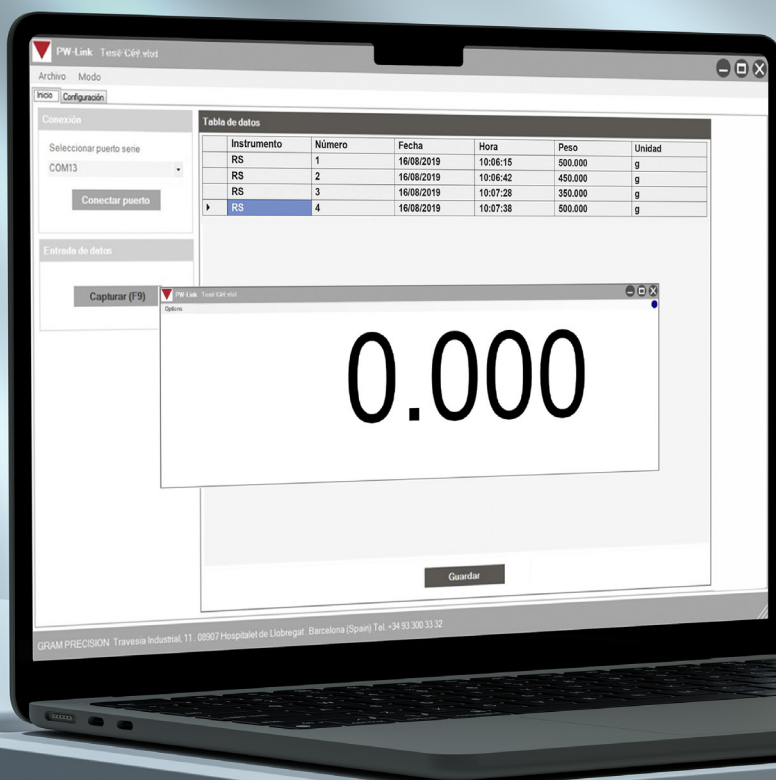

- PC application for visualisation and data logging.
- Dimensionally adjustable display, can occupy the full width of the PC screen.
- Display and record data with date and time.
- Exports records to CSV.
- Includes connection cable.

## Remote indicator

OPTIONAL




The remote display RD provides a large display if you need to consult the reading of the equipment from a greater distance.

## Zero memory

At start-up, the device memorises the previous zero level to ensure that the weighing of tanks and silos value of zero is maintained even if it the deposit keep charged.



## Wall and table top mounting, with two-position front panel

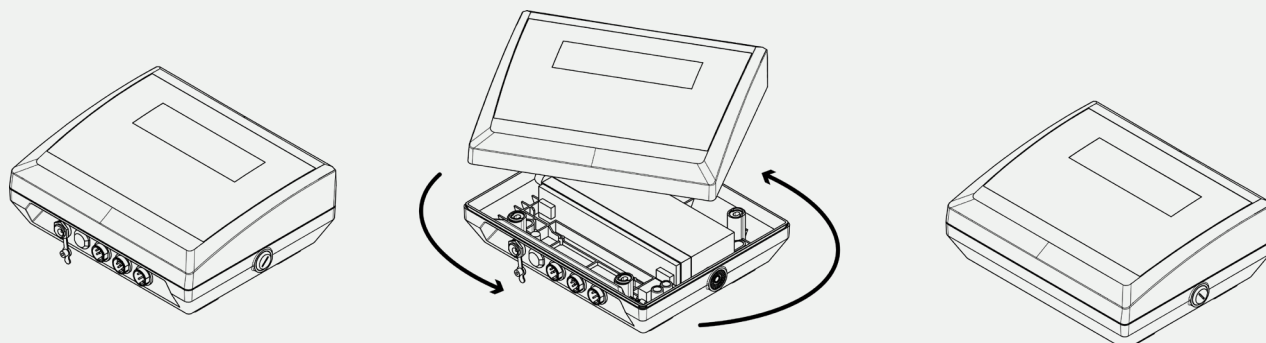

Wall instalation

Desktop installation

The front part adapts to the place of use, thanks to its easy 180° rotation.  
It also includes holes for wall mounting.





### Traffic light with relay board

- Adjustable three-level LED display for product sorting or illuminated information on weight differences programmed into the K3X M indicator.
- Wired connection.

### Painted steel base with stainless steel column

Supports the K3X indicator on a 930 mm high column.



### Stainless steel base with stainless steel column for K3X


Supports the K3X indicator on a 930 mm high column.

### ABS ball head bracket for K3X

Adapts the K3X indicator for wall installation.



## Dimensions

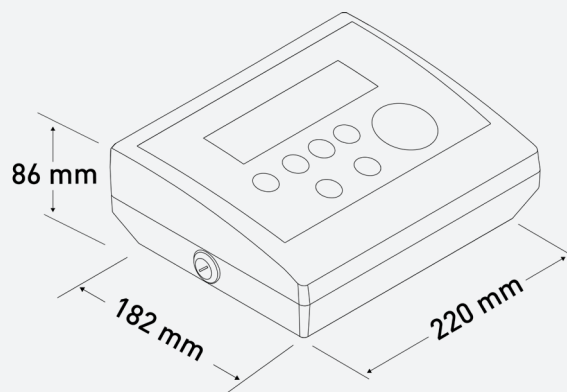

## ISOCAL certificate

- Our Xtrem equipment is delivered with CE-M verification as standard.
- We also offer our ISOCAL certificates, with individual calibration data of the Xtrem equipment.
- They assist in the maintenance of your ISO9001 Quality System.







Travessia Industrial, 11  
08907 Hospitalet de Llobregat  
Spain  
+34 93 300 33 32  
**gram-group.com**

#### **International Commercial Attention**

**United Kingdom:** [uk@gram.es](mailto:uk@gram.es)  
**North & East Europe:** [europe@gram.es](mailto:europe@gram.es)  
**North & South America:** [america@gram.es](mailto:america@gram.es)  
**Oceania:** [oceania@gram.es](mailto:oceania@gram.es)  
**Asia:** [asia@gram.es](mailto:asia@gram.es)  
**Africa:** [africa@gram.es](mailto:africa@gram.es)  
**Germany, Austria:** [sales@gram-group.de](mailto:sales@gram-group.de)  
**Italy:** [italy@gram.es](mailto:italy@gram.es)  
**France, Belgium:** [france@gram.es](mailto:france@gram.es)  
**Portugal:** [portugal@gram.es](mailto:portugal@gram.es)  
**Spain:** [spain@gram.es](mailto:spain@gram.es)

#### **International Weighing Projects**

[contact.export@gram.es](mailto:contact.export@gram.es)