




K3iX



Legally approved digital viewer

- Compatible with Xtrem® digital weighing equipment.
- High reliability thanks to its Z Link® digital communication technology.
- With CE-M Verification for legal use.
- Memory of 20 preset tares.
- High resolution display (shows one decimal place added).
- Sorting or checking by weight with green and red display.
- Animal weighing function and adaptive filters for unstable situations.
- Zero memory, for weighing silos and tanks.
- Program for dosing a product at two speeds.
- Compatible with label and ticket printers (Q2 and PR4).
- Ticket printing with three top lines and one bottom line.
- Programming of fixed ticket information lines from Windows.
- It prints a ticket with date, time and totalisation of the weighs carried out.
- Highly resistant stainless steel structure.
- Optional USB connection.

Xtrem® digital connection

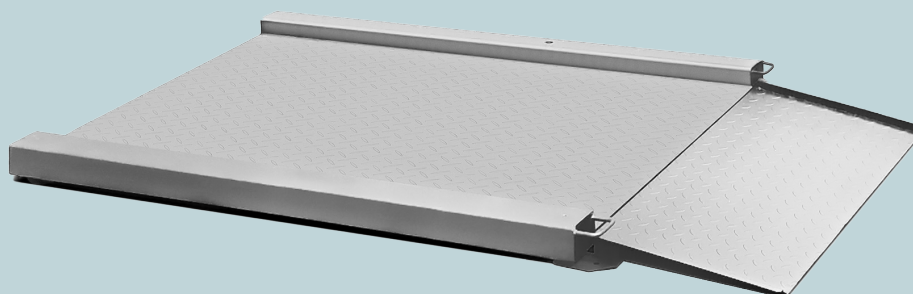

XTREM
DIGITAL WEIGHING TECHNOLOGY

ZLINK
DIGITAL CONNECTION

- Compatible with all Xtrem equipment for fully digital and reliable communication.
- Thanks to its ZLink® communication technology, the K3iX indicator can be connected to any Xtrem device without the need for calibration, fully digitally.



ZLink® 4m cable (Included)



ZLink® 6m cable (Not included)




ZLink® 8m cable (Not included)



Data output to PC via keyboard compatible connection, allowing the weight value information to be sent to any application running on the PC.

- This is an intelligent direct PC connection.
- The data reaches whatever application is in use at the time.
- No software required, the smart cable with USB connection is recognised by the PC's Windows operating system.

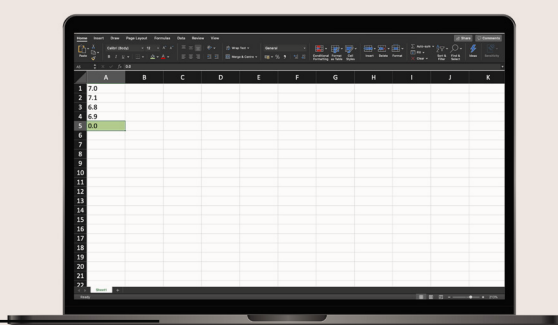

Weight limit warning



○ 1.05 kg


○ 1.00 kg

○ 0.95 kg

Connection with compatible printers for ticket and label printing, with three header lines and one footer line, which are programmed from software on PC with Windows 7 OS or higher.


PR4 Printer

- Ticket printing.
- Compact thermal printer.
- Printing speed of 130 mm/second.
- Ticket width 58 mm.
- Paper roll capacity up to 83 mm diameter.
- Cable connection (included).

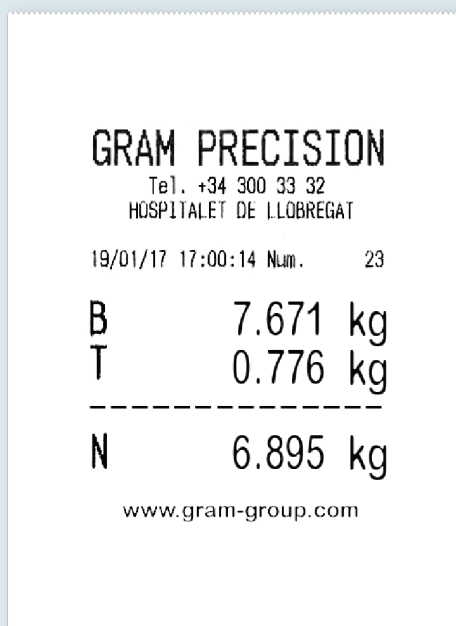

Q2 Printer

- Ticket and label printing.
- Easy loading of paper and labels.
- Print speed: 76 mm/s.
- Detects the start of the label.
- Front outlet, protected from liquids.
- Maximum capacity 90 mm diameter.
- LED bar to show its status.
- Screwless interchangeable printhead.
- Cable connection (included).

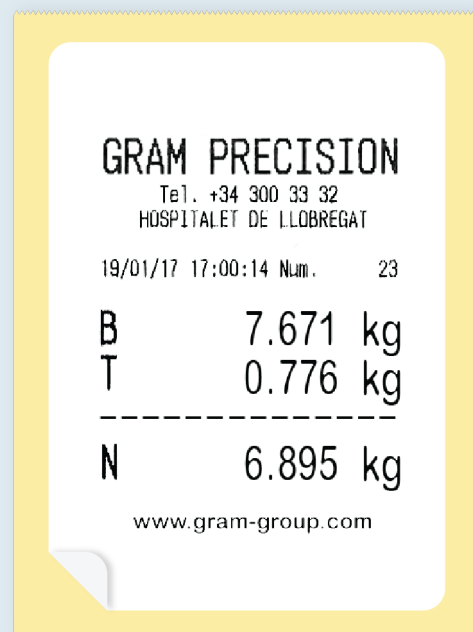

USB connection

OPTIONAL




- Data output with USB-A female connector.
- PC compatible.
- USB-A to USB-A cable not included.


High resolution

Displays 10 times higher resolution when pressing a key for a few seconds.



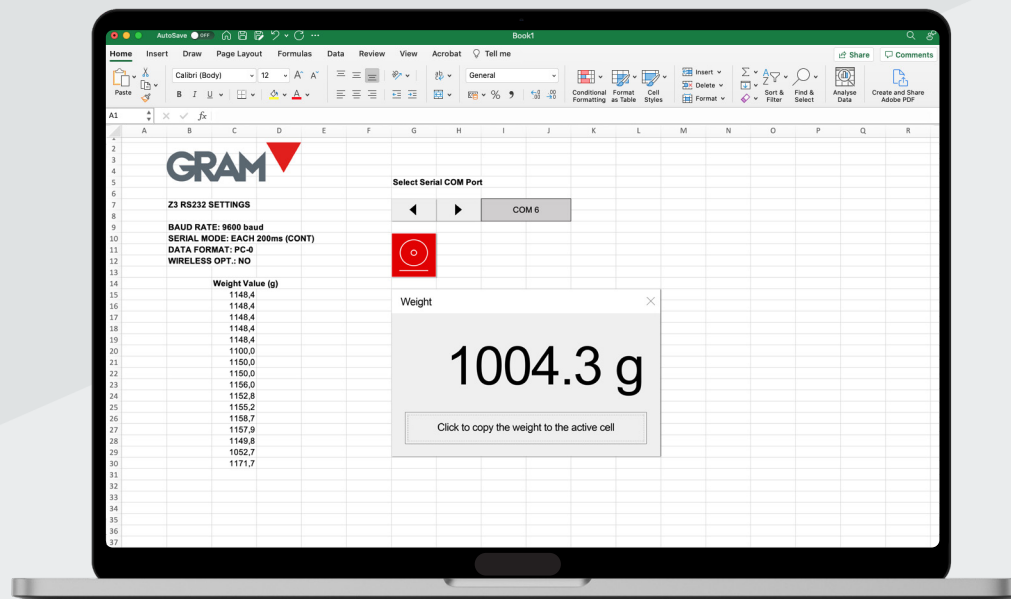

- PC data capture application.
- Import the records into a CSV or compatible sheet.

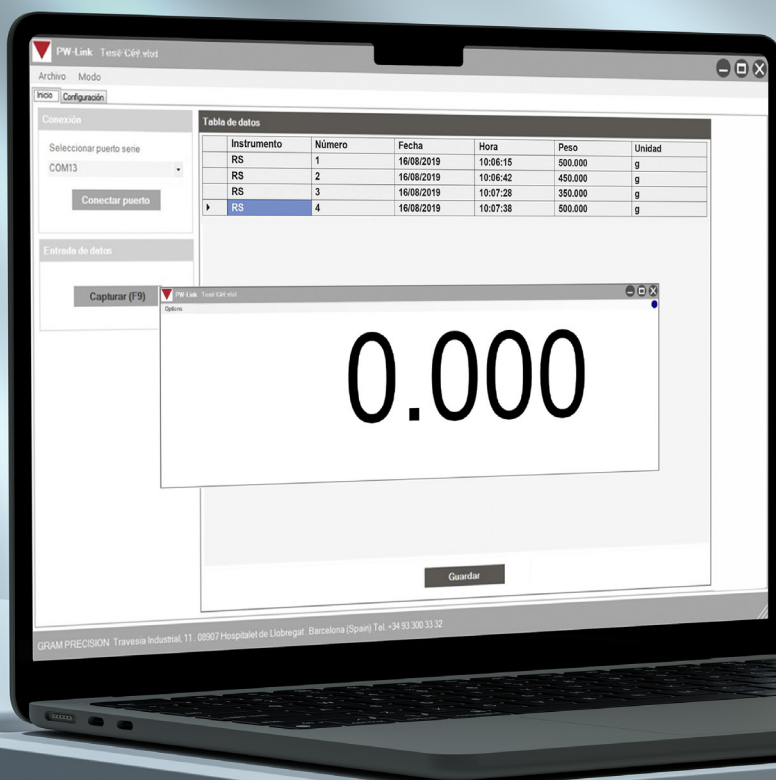

- PC application for visualisation and data logging.
- Dimensionally adjustable display, can occupy the full width of the PC screen.
- Display and record data with date and time.
- Exports records to CSV.
- Includes connection cable.

Remote indicator

OPTIONAL




The remote display RD provides a large display if you need to consult the reading of the equipment from a greater distance.

Zero memory

At start-up, the device memorises the previous zero level to ensure that the weighing of tanks and silos value of zero is maintained even if it the deposit keep charged.



Wall and table top mounting, with two-position front panel

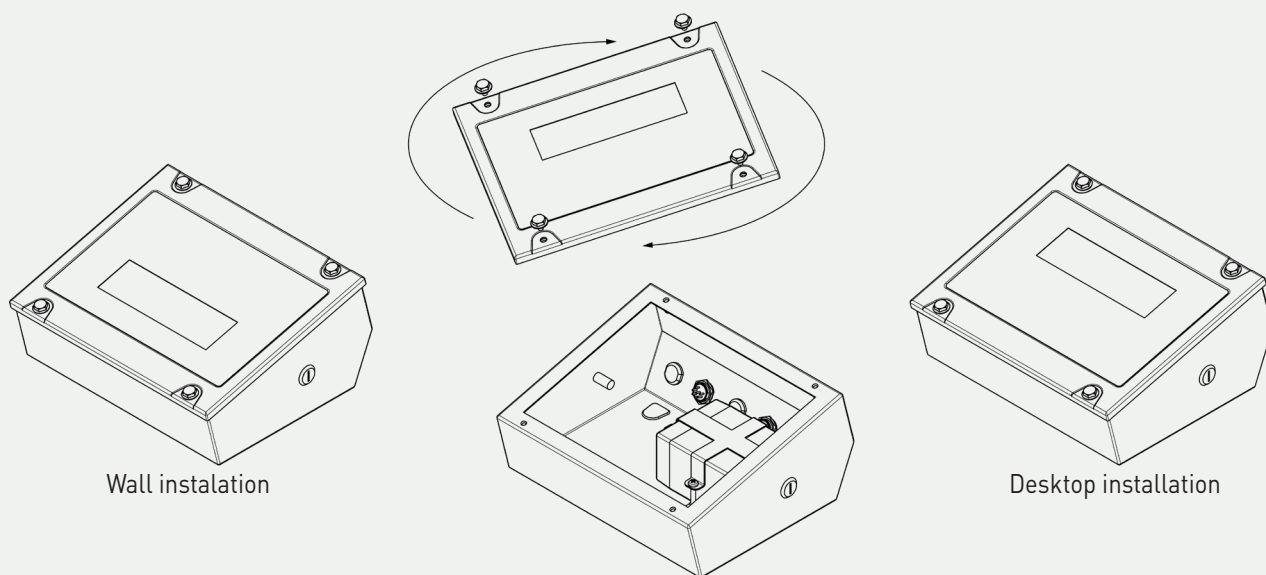

The front part adapts to the place of use, thanks to its easy 180° rotation.
It also includes holes for wall mounting.





Traffic light with relay board

- Adjustable three-level LED display for product sorting or illuminated information on weight differences programmed into the K3iX indicator.
- Wired connection.

Painted steel base with stainless steel column


Supports the K3iX indicator on a 930 mm high column.



Stainless steel base with stainless steel column for K3iX

Supports the K3iX indicator on a 930 mm high column.

Dimensions

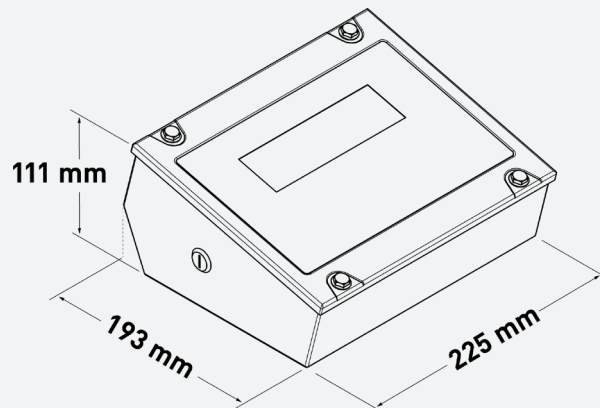

ISOCAL certificate

- Our Xtrem equipment is delivered with CE-M verification as standard.
- We also offer our ISOCAL certificates, with individual calibration data of the Xtrem equipment.
- They assist in the maintenance of your ISO9001 Quality System.





Travessia Industrial, 11
08907 Hospitalet de Llobregat
Spain
+34 93 300 33 32
gram-group.com

International Commercial Attention

United Kingdom: uk@gram.es
North & East Europe: europe@gram.es
North & South America: america@gram.es
Oceania: oceania@gram.es
Asia: asia@gram.es
Africa: africa@gram.es
Germany, Austria: sales@gram-group.de
Italy: italy@gram.es
France, Belgium: france@gram.es
Portugal: portugal@gram.es
Spain: spain@gram.es

International Weighing Projects

contact.export@gram.es