

TX Fox



TX Fox 120




Weigh bars for large, heavy structures

For weighing rigid structures, cages or long objects.

- Highly resistant, steel structure with epoxy treatment.
- Load cells in nickel-plated steel and IP67 protection.
- Dimensions of 800 or 1200 mm in length.
- With LED display TX indicator and 400 cm cable.
- 3000 kg capacity and 0.5 kg resolution on-screen.
- With wheels and handle for easy transport.
- Accumulation of heavy loads with total memory.
- Weighing count with free sampling.
- Digital filter for weighing moving animals.
- Built-in Ni-MH battery.

Accurex TX Fox scales are for professional use and withstand robust, intensive handling. They are made of a rigid, durable tubular steel structure with epoxy treatment.

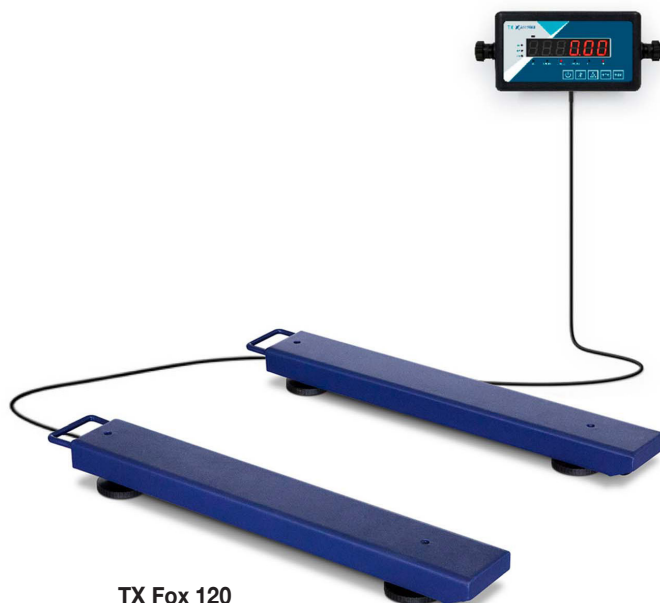

TX Fox 120



The **TX electronic indicator**, highly reliable, includes a 4-meter long cable and can be positioned remotely from the platform, on a table, or on the wall, with its included stand. The weighing response is extremely fast, showing stable weight accurately in less than 2 seconds.



TX Fox 80



It is powered by a 220 V mains supply and includes an internal battery which is recharged via the mains cable. The battery recharges when connected to the mains while the scale is being used.

Zero adjustment function. Possibility of zeroing the device by pressing a key.

Tare function. The weight of the pallet can be discounted by pressing the tare key.

Serial calibration. The device is supplied, calibrated and adjusted by our Barcelona calibration laboratory.



TX Fox 120



Operational functions

- Zero adjustment.
- Container taring with tare memory.

Technical features

Model	TX Fox 80-3T	TX Fox 120-3T
Reference	71324	71325
Capacity	3000 kg	
Resolution	500 g	
Weighing units	kg	
Power	Mains 220 V, 50 Hz	
Working temperature	0°C / +40°C	
Structure	Steel with baked epoxy paint	
Load sensors	4 H8C Rebel cells	
Connections box	sealed in ABS	
Structure thickness (mm)	5	
Dim. weighing area (mm)	(2x) 810 x 120	(2x) 1210 x 120
Minimum height (mm)	85	
Maximum height (mm)	100	
Platform net weight (kg)	(2x) 11	(2x) 16
Packaging dim. (mm)	180 x 1120 x 140	180 x 1370 x 140
Total weight with packaging (kg)	23	33

Platform accessories

Ref.	Accessories
31675	Feet with ball joint for FOX (unit)

External dimensions (mm)

