


# TX Snake

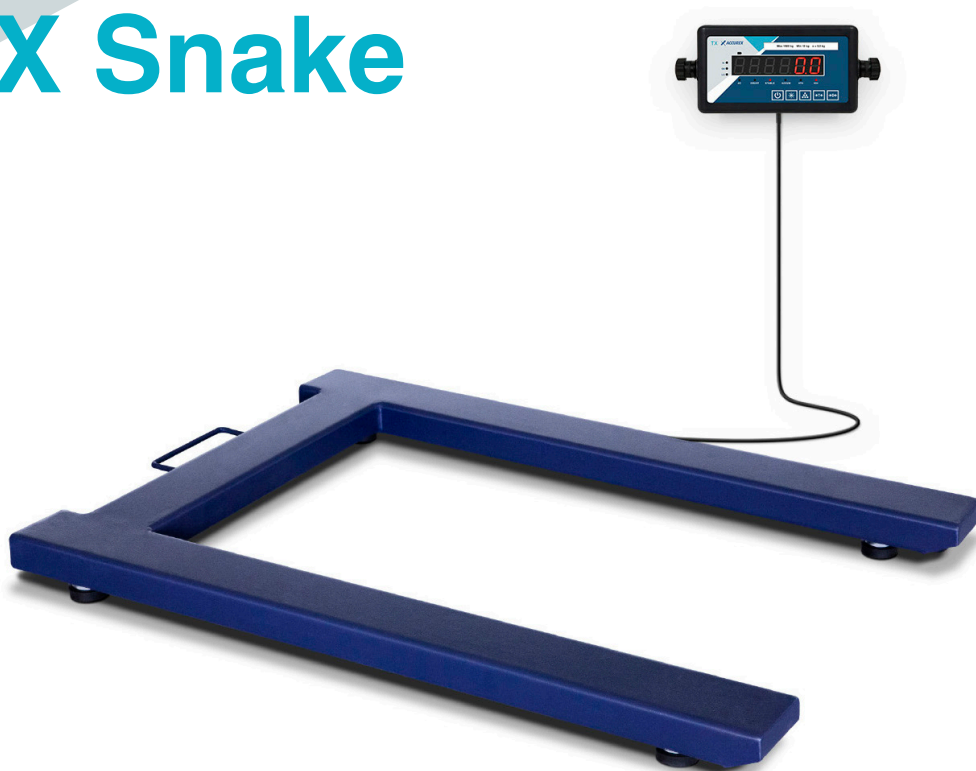

## Industrial floor scale for EUR-pallets

**For weighing European pallets without ramps, can be easily moved to another location.**

- Industrial scale for weighing heavy-duty EUR-pallets.
- Front wheels and handle for easy change of location.
- Highly resistant, steel structure with epoxy treatment.
- Low height weighing platform, only 90 mm, for easy access.
- Pallets weighed without ramps.
- Load cells in nickel-plated steel and IP67 protection.
- Feet with adjustable height to adapt it to the surface of use.
- With LED display TX indicator and 400 cm cable.
- Very bright weight display with 20 mm LED digits.
- 1500 kg capacity and 0.5 kg resolution on-screen.
- Operating time with internal batteries, up to 50 hours.
- Designed in Europe and manufactured by Gram Group

The **Accurex TX Snake** scale is a product for professional use. It is made with a rigid, durable steel structure with epoxy treatment to withstand robust, intensive treatment.

The **TX electronic display**, with a 4 m cable, can be placed on a bench or wall with optional support. Weighing response is extremely fast, in less than 2 seconds, and shows a stable, accurate weight.



It is powered by a 220 V mains supply and includes an internal battery which is recharged via the mains cable. The battery recharges when connected to the mains while the scale is being used.

**Zero adjustment function.** Possibility of zeroing the device by pressing a key.

**Tare function.** The weight of the pallet can be discounted by pressing the tare key.

**Serial calibration.** The device is supplied, calibrated and adjusted by our Barcelona calibration laboratory (audited annually by the European notified body NMI).




## Operational functions

- Zero adjustment.
- Container taring with tare memory.

## Technical features

Model	TX Snake 1.5T
Reference	71416
Capacity	1500 kg
Resolution	500 g
Weighing units	kg
Power	Mains 220 V, 50 Hz
Working temperature	0° / +40°C
Structure	Steel with baked epoxy paint
Load sensors	4 Xcell XF cells
Connections box	sealed in ABS
Structure thickness (mm)	5
Weighing platform dimensions (mm)	840 x 1210
Minimum height (mm)	90
Maximum height (mm)	105
Platform net weight (kg)	40
Packaging dim. (mm)	900 x 1270 x 80
Total weight with packaging (kg)	50

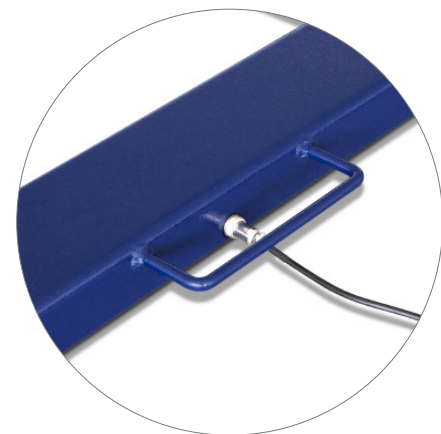

## External dimensions (mm)

